



4 x 4 SUPER TRACTOR

Model 425

Starting Serial No. 1001

Illustrated Parts List



CAUTION

- READ AND UNDERSTAND OPERATORS MANUAL BEFORE OPERATING OR SERVICING.
- OBEY ALL SAFETY INSTRUCTIONS. FAILURE TO DO SO MAY RESULT IN INJURY TO YOU OR OTHERS.
- BE SURE MACHINE IS IN SAFE OPERATING CONDITION BEFORE USE.
- INSPECT MACHINE DAILY. REPLACE ALL WORN OR DAMAGED PARTS.
- KEEP ALL GUARDS AND SHIELDS IN PLACE.
- CHECK OPERATION OF ALL SAFETY INTERLOCK SWITCHES DAILY.
- DO NOT OVERRIDE INTERLOCK SYSTEM, IT IS FOR YOUR PROTECTION.
- DO NOT ALLOW MINORS OR THE INEXPERIENCED TO OPERATE MACHINE.
- KEEP PEOPLE AND PETS A SAFE DISTANCE AWAY FROM MACHINE USING POWER DRIVEN ATTACHMENTS. INJURY COULD RESULT FROM FLYING DEBRIS.

Date of Purchase: Month _____ Day _____ Year _____

Dealer Name _____ Phone _____

Serial Number _____

Model Number _____

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

STEINER
TEXTRON

Steiner Division of Textron Inc.

STEINER TURF EQUIPMENT, INC.
289 N. Kurzen Rd., P.O. Box 504
Dalton, Ohio 44618

Telephone: (330) 828-0200
FAX: (330) 828-1008

TABLE OF CONTENTS

PARTS INDEX

ELECTRICAL	SECTION 1	page
-------------------	------------------	-------------

Kubota	Fig. 1	1-1
Onan	Fig. 2	1-5

ENGINE	SECTION 2
---------------	------------------

Kubota Engine	Fig. 3	2-1
Diesel Controls	Fig. 4	2-5
Diesel Cooling System	Fig. 5	2-9
Onan Controls	Fig. 8	2-10
Onan Engine	Fig. 7	2-11

HYDRAULICS	SECTION 3
-------------------	------------------

Primary Hydraulic System	Fig. 9	3-1
Implement Hydraulic System	Fig. 10.	3-5
Sundstrand Pump.	Fig. 22.	3-7
Sundstrand Motor.	Fig. 23.	3-9
Controls.	Fig. 6	3-10

FRAME, DRIVE PARTS, AXLES	SECTION 4
----------------------------------	------------------

Peerless Transaxle	Fig. 24.	4-1
Front Transaxle	Fig. 11.	4-5
Rear Transaxle	Fig. 12.	4-7
Rear Frame Parts.	Fig. 13.	4-9
Front Lift and Frame Parts	Fig. 14.	4-11
PTO Drive Parts	Fig. 15.	4-13
Hood and Grille Parts.	Fig. 16.	4-17

ACCESSORIES	APPENDIX
--------------------	-----------------

Roll Bar	Fig. 18.	A-1
Rear Weight Bar	Fig. 17.	A-2
Front Weight Bar	Fig. 25.	A-3
3-Point Hitch	Fig. 20, 21.	A-4
12 Volt Electrical Outlet	Fig. 27.	A-7
Warranty		last page


ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

Model 425 begins with Serial Number 1001


Serial No. Prefix C = 24 HP Onan Engine
Serial No. Prefix E = 21.5 HP Kubota Diesel

Form # 09-221D 5/95

Kubota
Electrical
Figure 1

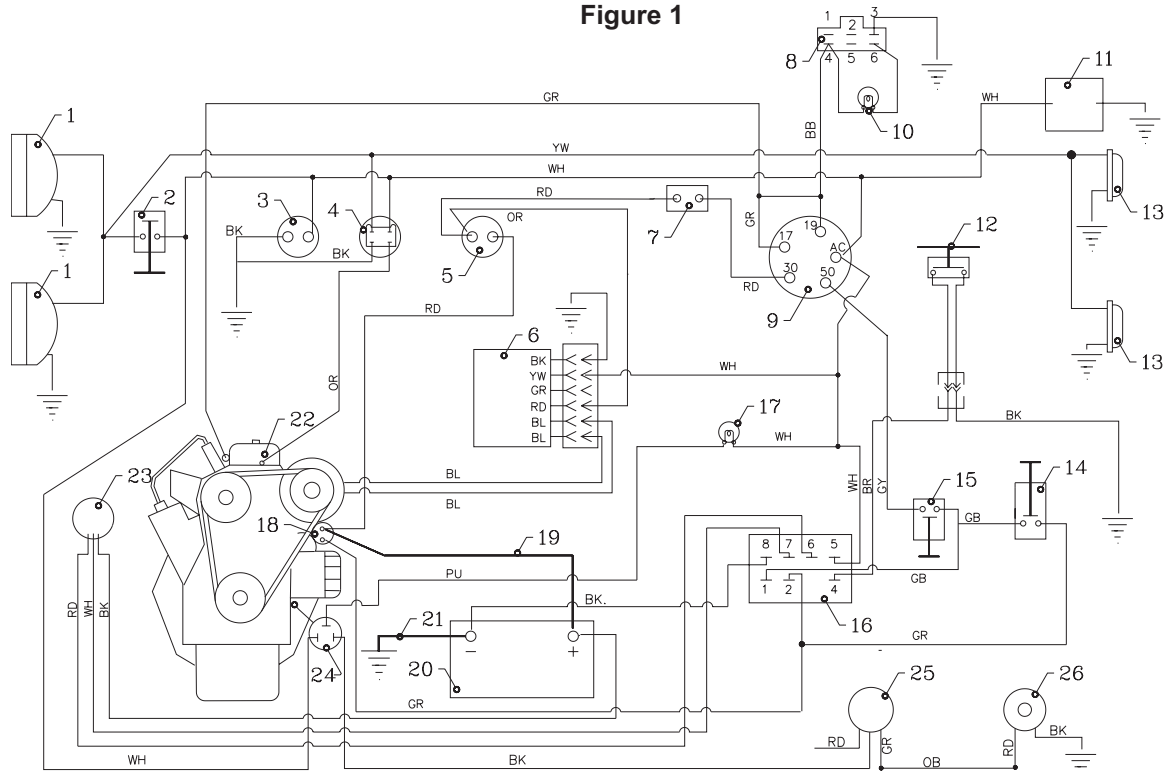

(Serial No. 1001 - 1171)

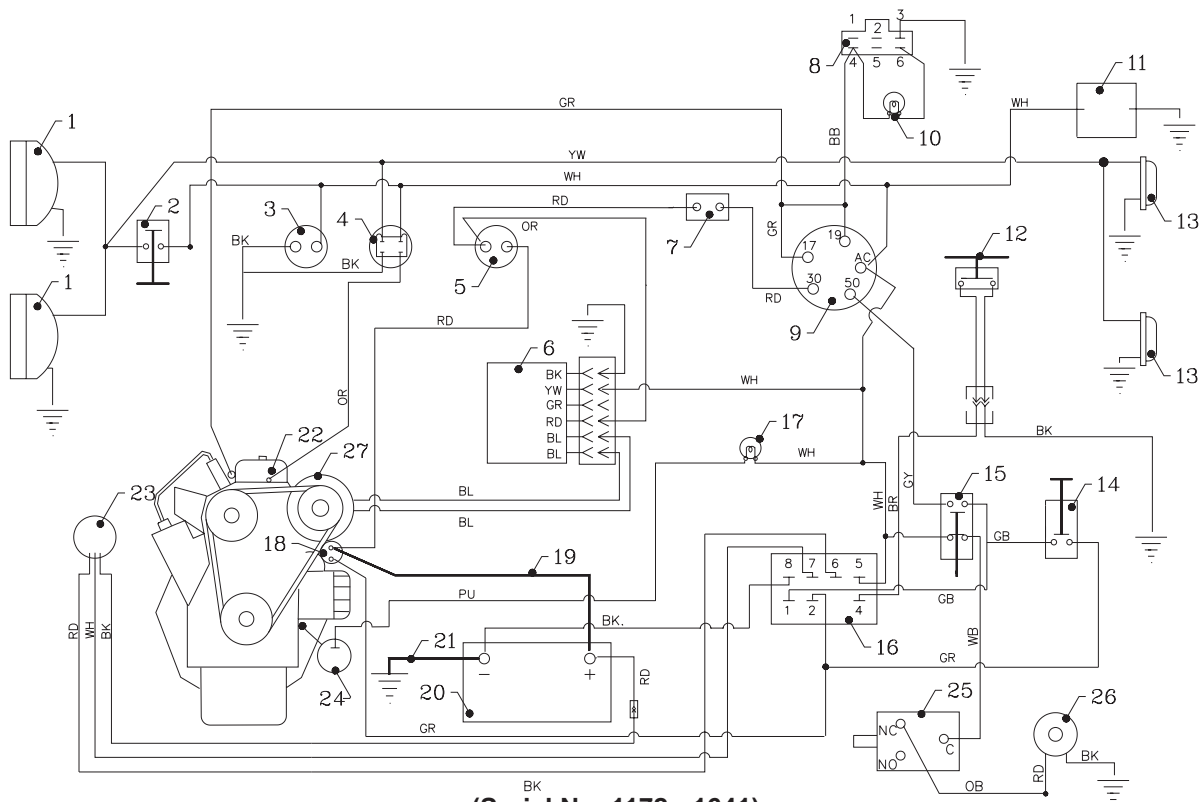

(Serial No. 1172 - 1641)


PARTS LIST for FIGURE 1 (Serial No. 1001 - 1641)

<u>Ref</u>	<u>Part no.</u>	<u>Description</u>	<u>Quantity</u>
1	33-017	Head Light	2
	33-010	Bulb 50W for 33-006 Head Light	1
2	31-003	Light Switch	1
3	35-014	Hour Meter	1
4	13-19488-83032	Water Temperature Gauge	1
5	35-016	Ammeter	1
6	13-19267-64602	Kubota Regulator	1
7	30-059	Circuit Breaker	1
8	13-15694-65991	Lamp Timer, Glow Plug Indicator	1
9	13-66706-55120	Ignition Switch	1
10	13-15403-64490	Indicator Light, Glow Plug	1
11	13-12584-52031	Electric Fuel Pump	1
12	31-017	Seat Switch	1
13	33-008	Tail Lights	1
14	31-004	PTO Switch	1
15	31-004	Neutral Start Switch (Serial No. 1001 - 1171)	1
	31-013	Neutral Start Switch (Serial No. 1172 - 1641)	1
16	35-060	Interlock Module	1
17	33-007	Oil Pressure Light	1
18	13-70000-65424	Starter	1
	13-70000-65307	Starter Solenoid	1
19	30-090	Battery Cable, to Starter 89"	1
	30-098	Cover, Positive Red	1
20	33-013	Battery, (Group 22F) (Serial No. 1001 - 1171)	1
	33-015	Battery, (Group 26F) (Serial No. 1172 - 1641)	1
21	30-090	Battery Cable, to Ground 89"	1
	30-105	Cover, Negative Black	1
22	13-31351-32831	Water Temperature Sender	1
23	35-049	Stop Solenoid	1
24	13-050	Oil Pressure Switch (Serial No. 1001 - 1171)	1
	13-15531-39010	Oil Pressure Switch (Serial No. 1172 - 1641)	1
25	70-091	Hydraulic Oil Pressure Switch	1
26	35-064	Horn, Alarm	1
27	13-15531-64013	Alternator	1
*	30-103	Wiring Harness (Serial No. 1001 - 1171)	1
*	30-106	Wiring Harness (Serial No. 1172 - 1641)	1


* Not Illustrated

Color Legend

BB = Blue with Black stripe
BK = Black
BL = Blue
BR = Brown
GB = Gray with Blue stripe
GR = Green
GY = Gray
OB = Orange with Black stripe
OR = Orange
PU = Purple
RD = Red
WB = White with Black stripe
WH = White
WO = White with Orange stripe
YW = Yellow
GY14 = Gray, 14 gauge

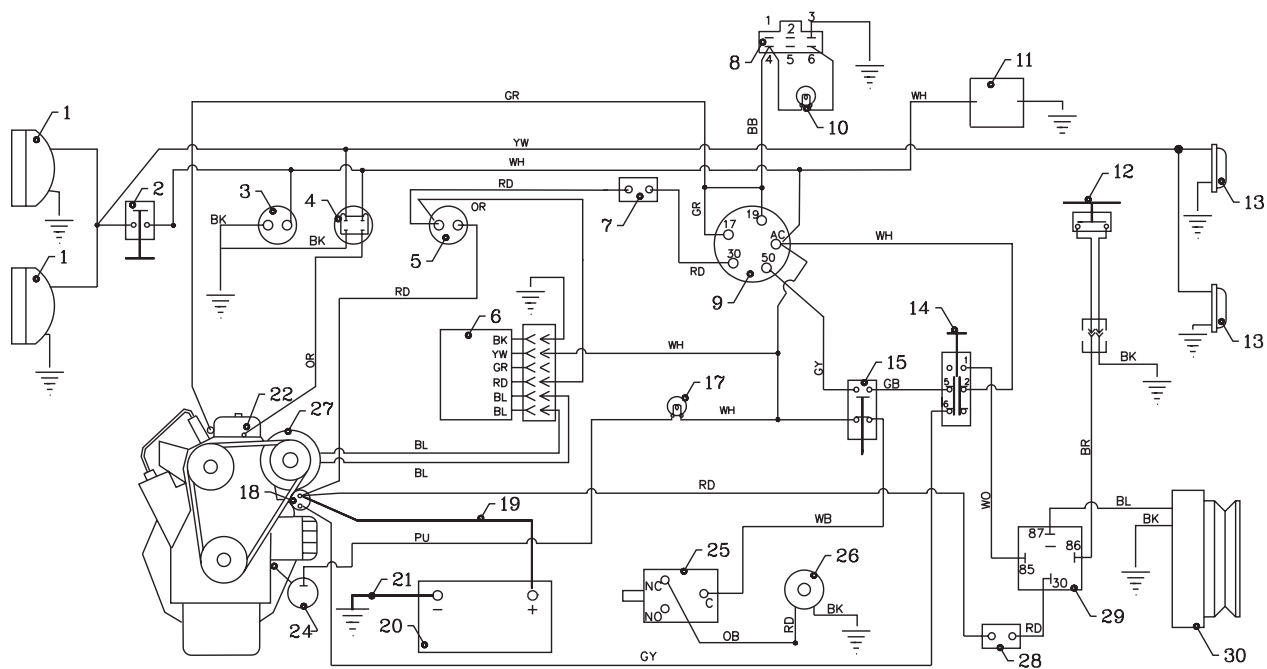Kubota
Electrical
Figure 1A

(Serial No. 1642 - 2999)

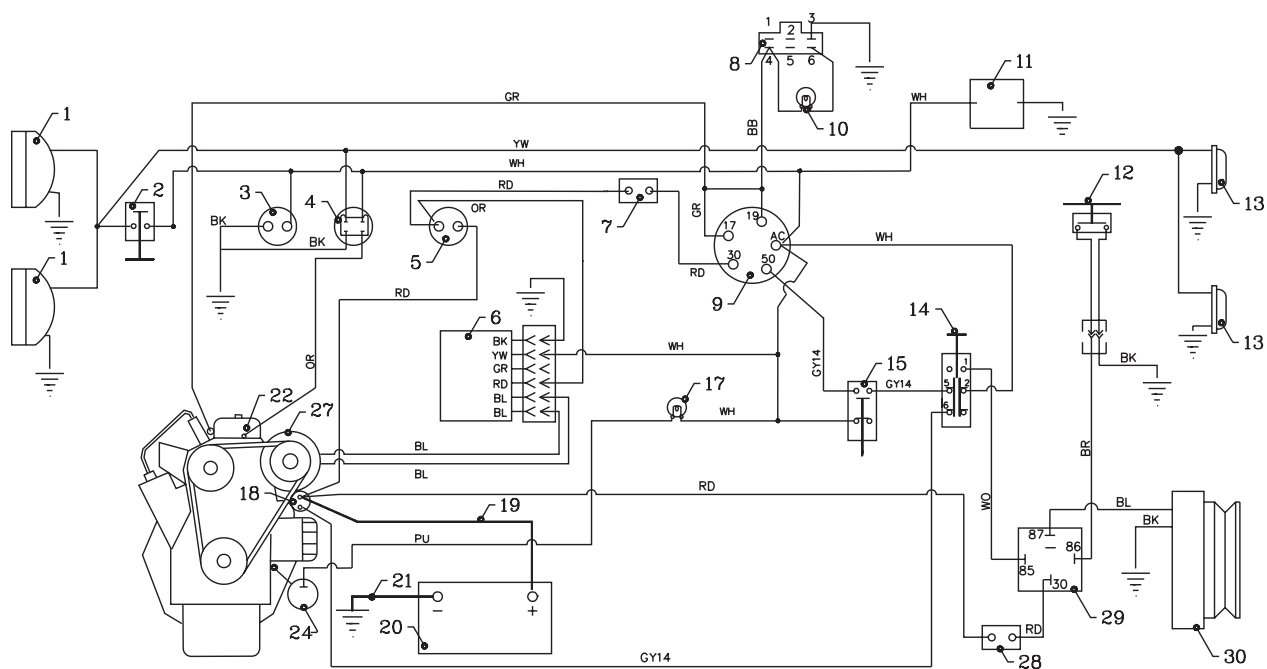

(Serial No. 3000 -)

PARTS LIST for FIGURE 1A (Serial No. 1642 -)


Ref	Part no.	Description	Quantity
1	33-006	Head Light (Serial No. 1642 - 1731)	2
	33-010	Bulb 50W for 33-006 Head Light	1
	33-017	Head Light (Serial No. 1732 -)	2
	33-018	Bulb, Sealed Beam for 33-017 Head Light	1
2	31-003	Light Switch	1
3	35-014	Hour Meter	1
4	13-19488-83032	Water Temperature Gauge	1
5	35-016	Ammeter	1
6	13-19267-64602	Voltage Regulator	1
7	30-059	Circuit Breaker	1
8	13-15694-65991	Lamp Timer, Glow Plug Indicator	1
9	13-66706-55120	Ignition Switch	1
10	13-15403-64490	Indicator Light, Glow Plug	1
11	13-12584-52031	Electric Fuel Pump	1
12	31-017	Seat Switch (Serial No. 1001 - 3086)	1
	31-032	Seat Switch (Serial No. 3087-)	1
13	33-008	Tail Light	1
14	31-020	Switch, Push-Pull	1
15	31-013	Neutral Start Switch	1
17	33-007	Oil Pressure Light	1
18	13-70000-65424	Starter	1
	13-70000-65425	Starter Solenoid	1
19	30-182	Battery Cable, 95" Positive	1
	30-098	Cover, Positive Red	1
20	33-015	Battery, Group 26	1
21	30-183	Battery Cable, 95" Negative	1
	30-105	Cover, Negative Black	1
22	13-31351-32831	Water Temperature Sender	1
23	35-049	Stop Solenoid	1
24	13-15531-39010	Oil Pressure Switch	1
25	70-091	Hydraulic Oil Pressure Switch (Serial No. 1642 - 2999)	1
26	35-064	Horn, Alarm (Serial No. 1642 - 2999)	1
27	13-15531-64013	Alternator	1
28	30-114	Breaker, 20 Amp.	1
29	35-067	Relay	1
30	86-051	Electric Clutch	1
*	30-128	Wire Harness, 425 Dsl Elec.Clutch (SN 1642 - 1731)	1
*	30-144	Wire Harness, 425 Dsl Elec.Clutch (SN 1732 - 2999)	1
*	30-177	Wire Harness, 425 Dsl Elec.Clutch (SN 3000 -)	1

* Not Illustrated

Color Legend

BB = Blue with Black stripe
 BK = Black
 BL = Blue
 BR = Brown
 GB = Gray with Blue stripe
 GR = Green
 GY = Gray
 OB = Orange with Black stripe
 OR = Orange
 PU = Purple
 RD = Red
 WB = White with Black stripe
 WH = White
 WO = White with Orange stripe
 YW = Yellow
 GY14 = Gray, 14 gauge

Onan
Electrical
Figure 2

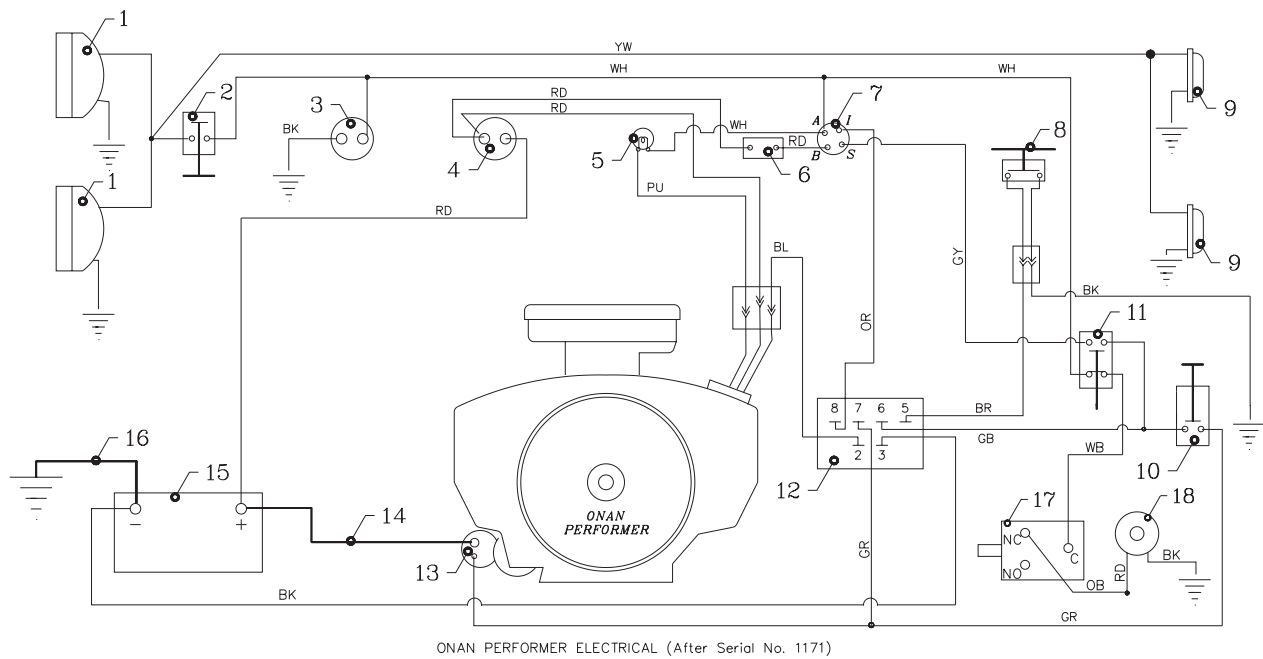

(Serial No. 1001 - 1641)


PARTS LIST for FIGURE 2 (Serial No. 1001 - 1641)

Ref	Part no.	Description	Quantity
1	33-017	Headlight	2
	33-010	Bulb 50W for 33-006 Head Light	1
2	31-003	Light Switch	1
3	35-014	Hour meter	1
4	35-016	Ammeter	1
5	33-007	Oil Pressure Light	1
6	30-059	Circuit Breaker	1
7	31-002	Ignition Switch	1
8	31-017	Seat Switch	1
9	33-008	Tail Light	2
10	31-004	PTO Switch	1
11	31-013	Neutral Start Switch	1
12	35-059	Interlock Module	1
13	13-191-1949-04	Starter	1
	13-191-1956	Starter Solenoid	1
14	30-070	Battery Cable, to Starter 41"	1
	30-098	Cover, Positive Red	1
15	33-002	Battery, (Group 22F) - (Serial No. 1001 - 1348)	1
	33-015	Battery, (Group 26F) - (Serial No. 1349 - 1641)	1
16	30-068	Battery Cable, to Ground 18"	1
	30-105	Cover, Negative Black	1
17	70-091	Hydraulic Oil Pressure Switch	1
18	35-064	Horn, Alarm	1
*	30-104	Wiring Harness	1

* Not Illustrated

Color Legend

BB = Blue with Black stripe
 BK = Black
 BL = Blue
 BR = Brown
 GB = Gray with Blue stripe
 GR = Green
 GY = Gray
 OB = Orange with Black stripe
 OR = Orange
 PU = Purple
 RD = Red
 WB = White with Black stripe
 WH = White
 WO = White with Orange stripe
 YW = Yellow
 GY14 = Gray, 14 gauge

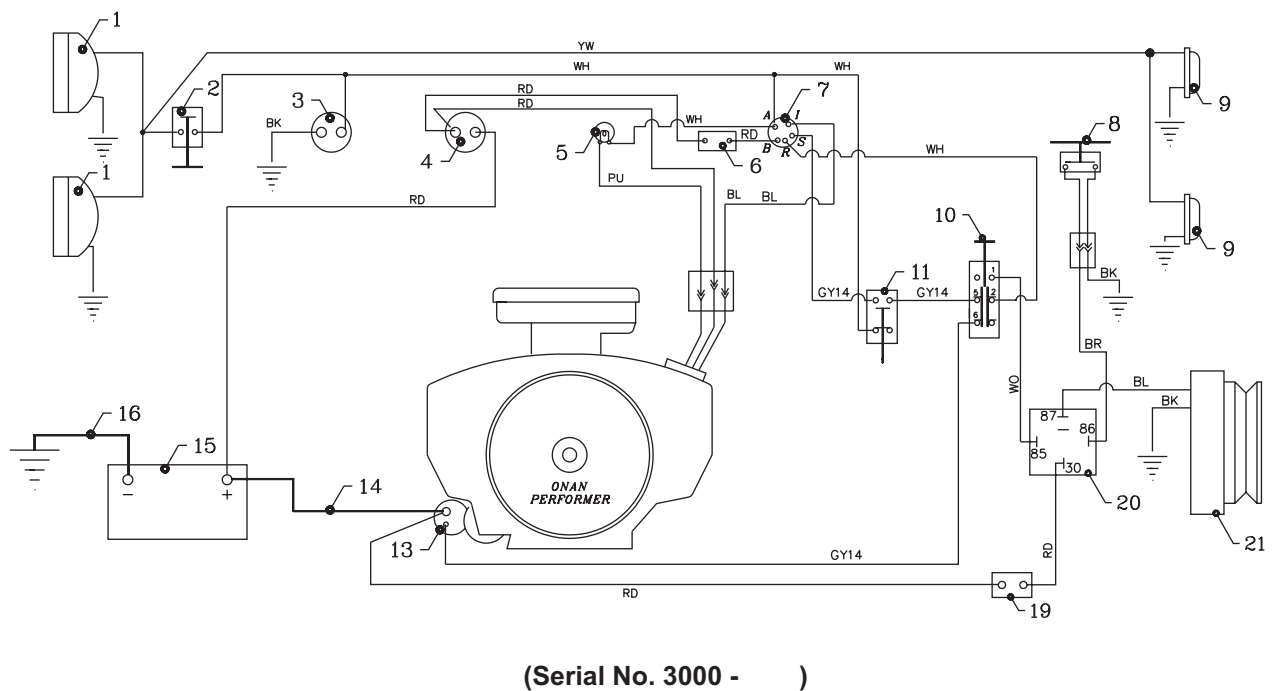[illegible]

PARTS LIST for FIGURE 2A (Serial No. 1642 -)


Ref	Part no.	Description	Quantity
1	33-006	Head Light (Serial No. 1642 - 1731)	2
	33-010	Bulb 50W for 33-006 Head Light	1
	33-017	Head Light (Serial No. 1732 -)	2
	33-018	Bulb, Sealed Beam for 33-017 Head Light	1
2	31-003	Light Switch	1
3	35-014	Hour Meter	1
4	35-016	Ammeter	1
5	33-007	Oil Pressure Light	1
6	30-059	Circuit Breaker	1
7	31-002	Ignition Switch	1
8	31-017	Seat Switch (Serial No. 1001 - 3086)	1
	31-032	Seat Switch (Serial No. 3087-)	1
9	33-008	Tail Light	2
10	31-020	Switch, Push-Pull	1
11	31-013	Neutral Start Switch	1
13	13-191-1949-04	Starter	1
	13-191-1956	Starter Solenoid	1
14	30-126	Battery Cable, 41"	1
	30-098	Cover, Positive Red	1
15	33-015	Battery, Group 26	1
16	30-126	Battery Cable, 41"	1
	30-105	Cover, Negative Black	1
17	31-018	Hydraulic Oil Pressure Switch (Serial No. 1642 - 2999)	1
18	35-064	Horn, Alarm (Serial No. 1642 - 2999)	1
19	30-114	Breaker, 20 Amp.	1
20	35-067	Relay	1
21	86-051	Electric Clutch, 425	1
*	30-129	Wire Harness, 425 Onan Elec. Clutch (SN 1642 - 1731)	1
*	30-143	Wire Harness, 425 Onan Elec. Clutch (SN 1732 - 2999)	1
*	30-178	Wire Harness, 425 Onan Elec. Clutch (SN 3000 -)	1

* Not Illustrated

Color Legend

BB = Blue with Black stripe
 BK = Black
 BL = Blue
 BR = Brown
 GB = Gray with Blue stripe
 GR = Green
 GY = Gray
 OB = Orange with Black stripe
 OR = Orange
 PU = Purple
 RD = Red
 WB = White with Black stripe
 WH = White
 WO = White with Orange stripe
 YW = Yellow
 GY14 = Gray, 14 gauge

**Kubota Parts
Figure 3
(Serial No. 1001 - 1641)**

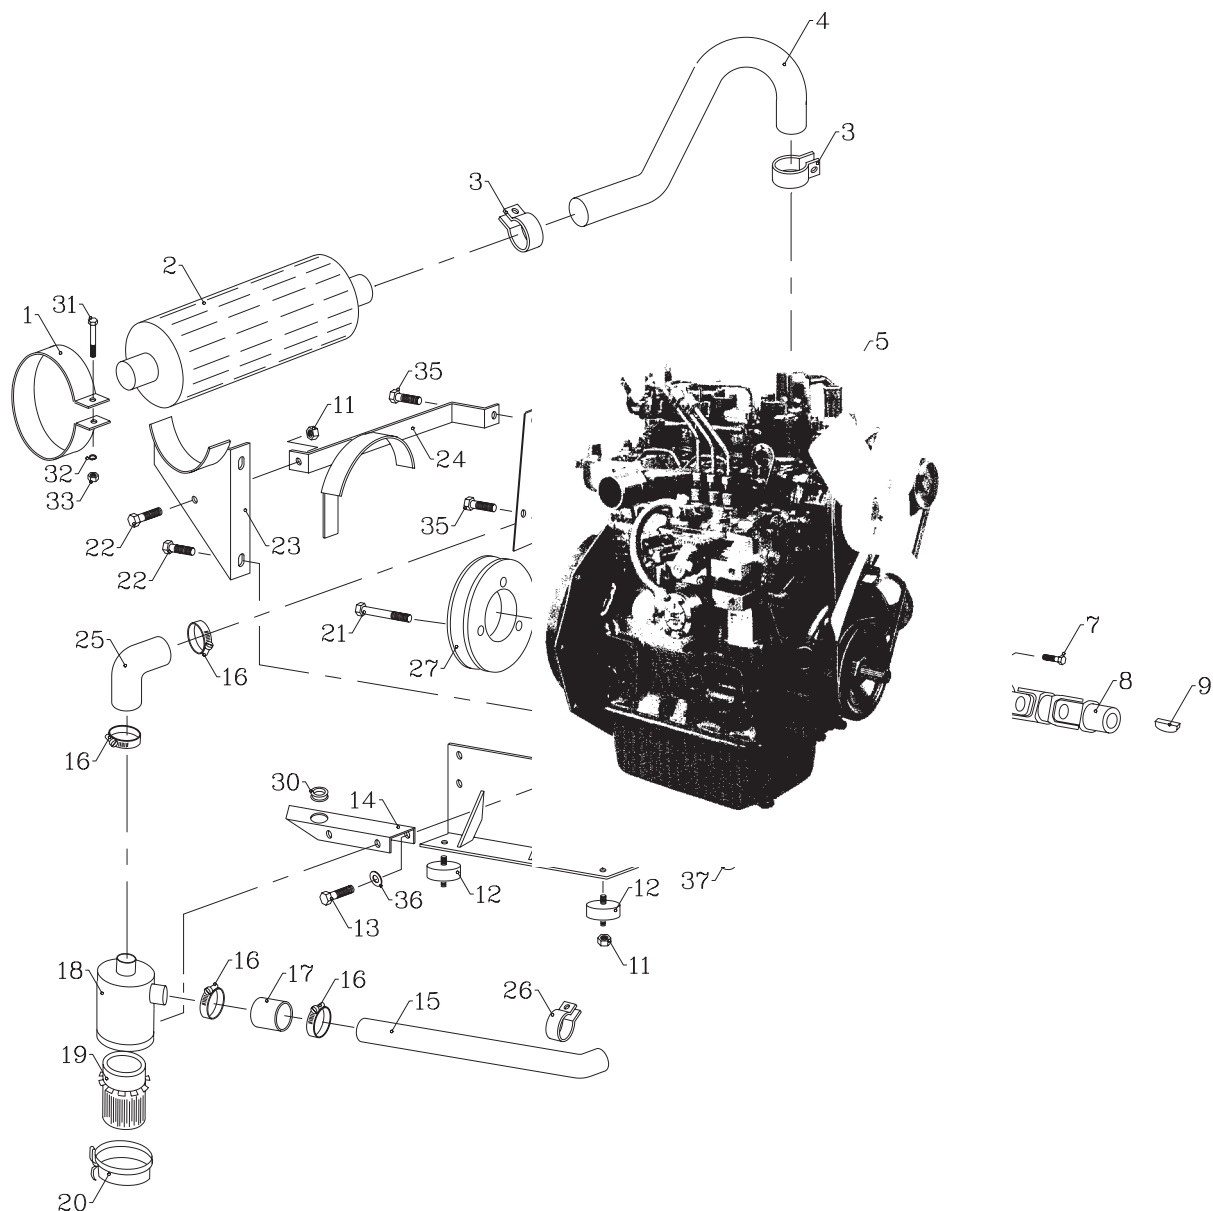

PARTS LIST for FIGURE 3 (Serial No. 1001 - 1641)

Ref	Part no.	Description	Quantity
1	64-536	Clamp, Muffler Hold Down	1
2	13-14952-12112	Muffler	1
3	13-044	Muffler Clamp	2
4	13-046	Exhaust Pipe	1
5	13-045	Engine, Complete Kubota D950B-1	1
6	13-66704-88533	Adapter, Spline Drive	1

PARTS LIST for FIGURE 3 (Serial No. 1001 - 1641) continued


Ref	Part no.	Description	Quantity
7	07-0812525	Bolt, M8 x 25	3
8	87-135	Powershaft, Pump Drive	1
	29-083	Grease fitting	1
9	85-W0305	Woodruff Key	1
10	62-609	Plate, Engine Mount Left - (Serial No. 1001-1224)	1
	62-641	Plate, Engine Mount Left - (Serial No. 1225 -)	1
	62-610	Plate, Engine Mount Right - (Serial No. 1001-1224)	1
	62-642	Plate, EngineMount Right - (Serial No. 1225 -)	1
11	92-06	Nut, 3/8	8
12	05-006	Isolator, Engine Mount	4
13	07-1012520	Bolt, M10 x 20	8
14	60-435	Mounting Plate, Air Cleaner	1
15	13-047	Tube, Air Intake	1
16	11-029	Hose Clamp	4
17	14-031	Hose, Air Intake	1
18	13-15372-11014	Air Cleaner Assembly	1
19	13-70000-11221	Element, Air Cleaner	1
20	13-15241-11160	Cover, Air Cleaner	1
21	07-1012550	Bolt, M10 x 50	3
22	99-K19	Flange Bolt, 5/16 x 3/4	3
23	60-426	Muffler Support	1
24	64-453	Belt Retainer	1
25	14-030	Hose, Air Intake	1
26	13-044	Clamp, Intake Tube	1
27	83-027	Pulley, Flywheel	1
28	13-70000-15241	Oil Filter	1
29	13-15531-74110	Fan	1
30	05-032	Grommet	1
31	90-0420	Bolt, 1/4 x 2-1/2	1
32	96-04	Lock Washer, 1/4	1
33	92-04	Nut, 1/4	1
34	60-429	Flywheel Guard	1
35	07-0812520	Bolt, M8 x 20	2
36	94-06	Flat Washer, 3/8	8
37	13-029	Oil Drain Cock	1
*	13-15381-01620	Gasket, Oil Pan	1
*	13-15381-14520	Gasket, Valve Cover	1
*	13-15978-03310	Gasket, Head	1
*	13-15261-12360	Gasket, Exhaust Manifold	3
*	13-15261-11820	Gasket, Intake Manifold	1
*	13-15261-11830	Gasket, Intake Manifold	2
*	13-15951-65510	Glow Plug	3
*	13-15271-53000	Injector, Nozzle 1	1
*	13-15271-53020	Injector, Nozzle 2	2
*	13-17011-53620	Injector Packing	3
*	13-15531-73010	Thermostat	1
*	13-15676-73270	Gasket, Thermostat	1
*	13-15383-12311	Exhaust Manifold, Top Outlet	1

The following parts are for an electric block heater:

*	13-70000-73274	Block Heater	1
*	13-70000-91515	Cord, Electric Block Heater	1

* Not Illustrated

Kubota Parts
Figure 3A

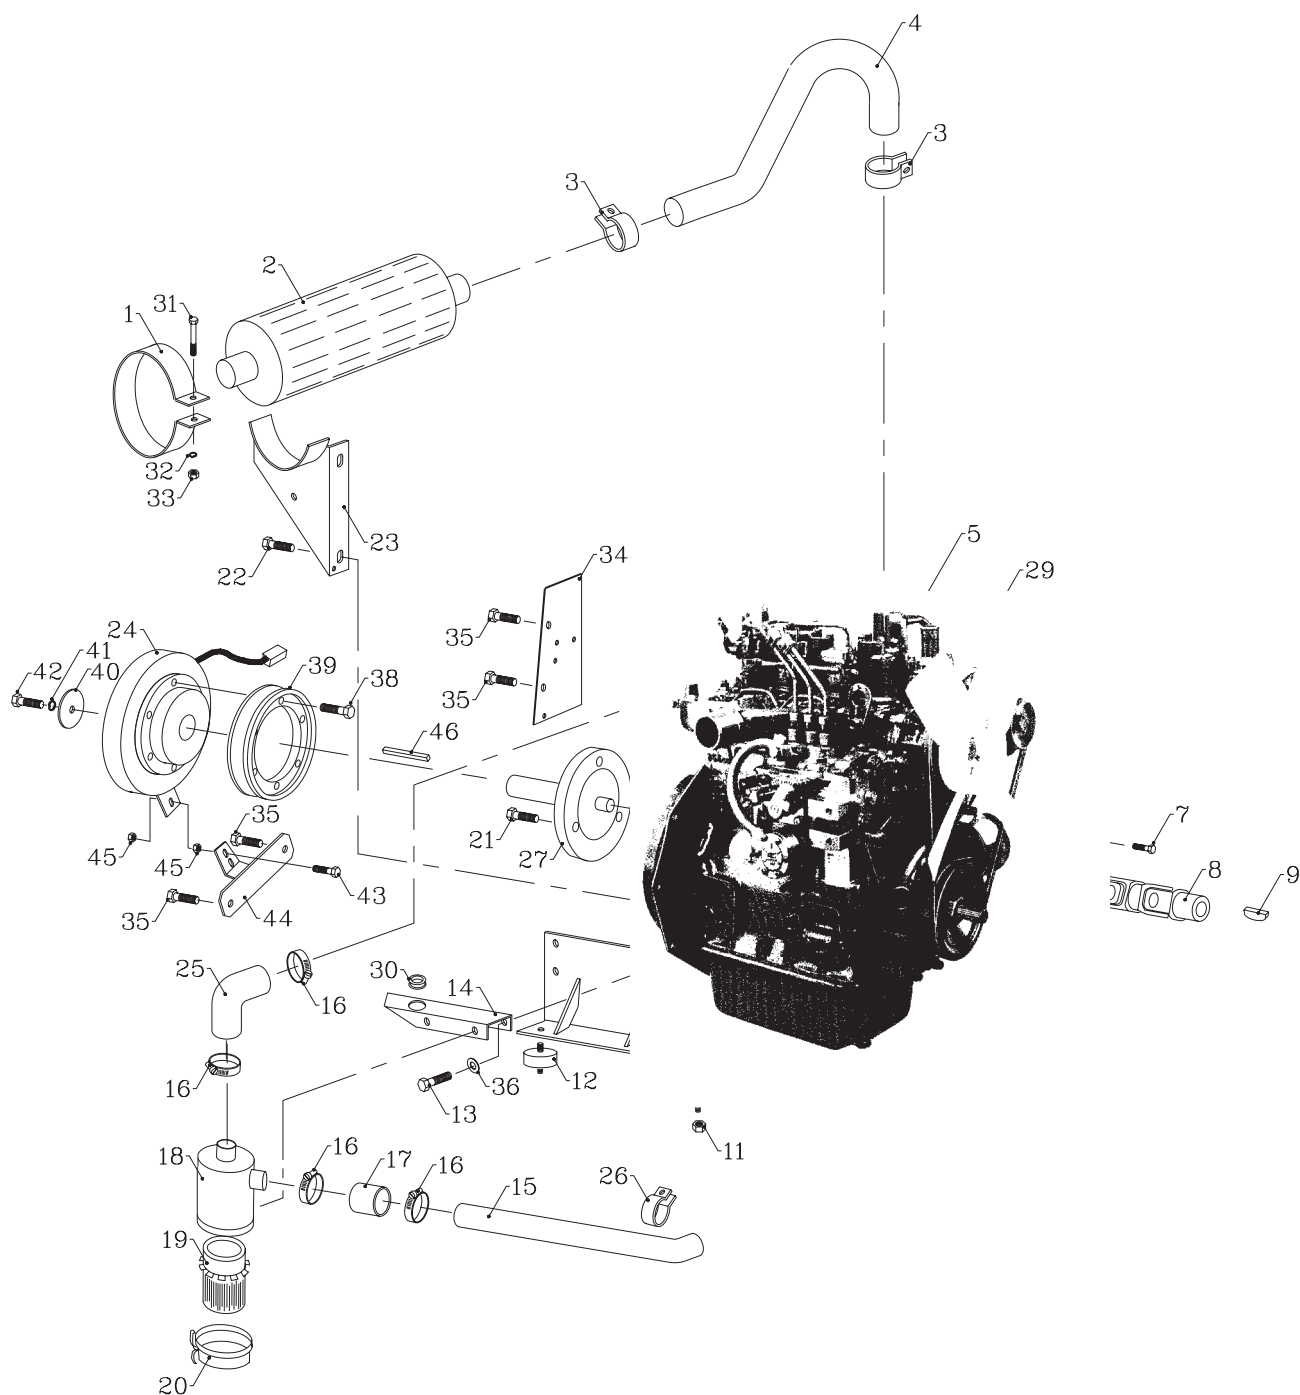

PARTS LIST for FIGURE 3A (Serial No. 1642 -)

Ref	Part no.	Description	Quantity
1	64-536	Clamp, Muffler Hold Down	1
2	13-14952-12112	Muffler	1
3	13-044	Muffler Clamp	2
4	13-046	Exhaust Pipe	1
5	13-045	Engine, Complete Kubota D950B-1	1
6	13-66704-88533	Adapter, Spline Drive	1

PARTS LIST for FIGURE 3A (Serial No. 1642 -)


Ref	Part no.	Description	Quantity
7	07-0812525	Bolt, M8-1.25 x 25	3
8	87-135	Powershaft, Pump Drive	1
	29-083	Grease fitting	1
9	85-W0305	Woodruff Key	1
10	62-641	Plate, Engine Mount Left	1
	62-642	Plate, Engine Mount Right	1
11	92-06	Nut, 3/8	8
12	05-006	Isolator, Engine Mount	4
13	07-1012525	Bolt, M10-1.25 x 25	8
	07-C10	Lock Washer, M10	8
14	60-435	Mounting Plate, Air Cleaner	1
15	13-047	Tube, Air Intake	1
16	11-029	Hose Clamp	4
17	14-031	Hose, Air Intake	1
18	13-15372-11014	Air Cleaner Assembly	1
19	13-70000-11221	Element, Air Cleaner	1
20	13-15241-11160	Cover, Air Cleaner	1
21	07-1012525	Metric Bolt, M10-1.25 x 25	3
22	99-K19	Flange Bolt, 5/16 x 3/4	3
23	60-426	Muffler Support	1
24	86-051	Electric Clutch, 425	1
25	14-030	Hose, Air Intake	1
26	13-044	Muffler Clamp, Bolt & Nut Included	1
27	87-179	Stub Shaft, Electric Clutch (Serial No. 1001 - 3098)	1
28	13-70000-15241	Engine Oil Filter	1
29	13-15531-74110	Fan	1
30	05-032	Grommet	1
31	90-0420	Bolt, 1/4 x 2-1/2	1
32	96-04	Lock Washer, 1/4	1
33	92-04	Nut, 1/4	1
34	60-532	Flywheel Guard	1
35	07-0812520	Bolt, M8-1.25 x 20	4
36	94-06	Flat Washer, 3/8	8
37	13-029	Oil Drain Cock	1
38	07-0812525D912	Metric Bolt, M8-1.25x25 Socket Head	6
39	83-033	Pulley, Electric Clutch	1
40	64-906	Washer, Clutch Retaining	1
41	96-06	Lock Washer, 3/8	1
42	91-0610	Bolt, 3/8 x 1-1/4 NF	1
43	99-K26	Flange Bolt, 1/4 x 3/4	1
44	64-648	Bracket, Clutch Anchor	1
45	99-E20	Flange Nut, 1/4	2
46	85-K0428	Key, 1/4 x 1/4 x 3-1/2	1
*	13-15381-01620	Gasket, Oil Pan	1
*	13-15381-14520	Gasket, Valve Cover	1
*	13-15978-03310	Gasket, Head	1
*	13-15261-12360	Gasket, Exhaust Manifold	3
*	13-15261-11820	Gasket, Intake Manifold	1
*	13-15261-11830	Gasket, Intake Manifold	2
*	13-15951-65510	Glow Plug	3
*	13-15271-53000	Injector, Nozzle 1	1
*	13-15271-53020	Injector, Nozzle 2	2
*	13-17011-53620	Injector Packing	3
*	13-15531-73010	Thermostat (D600 Only)	1
*	13-15676-73270	Gasket, Thermostat	1
*	13-15383-12311	Exhaust Manifold, Top Outlet	1

The following parts are for electric block heater:

*	13-70090-02850	Block Heater	1
*	13-70090-02851	Cord, Electric Block Heater	1


* Not Illustrated

Kubota Controls
Figure 4
(Serial No. 1001 - 1641)

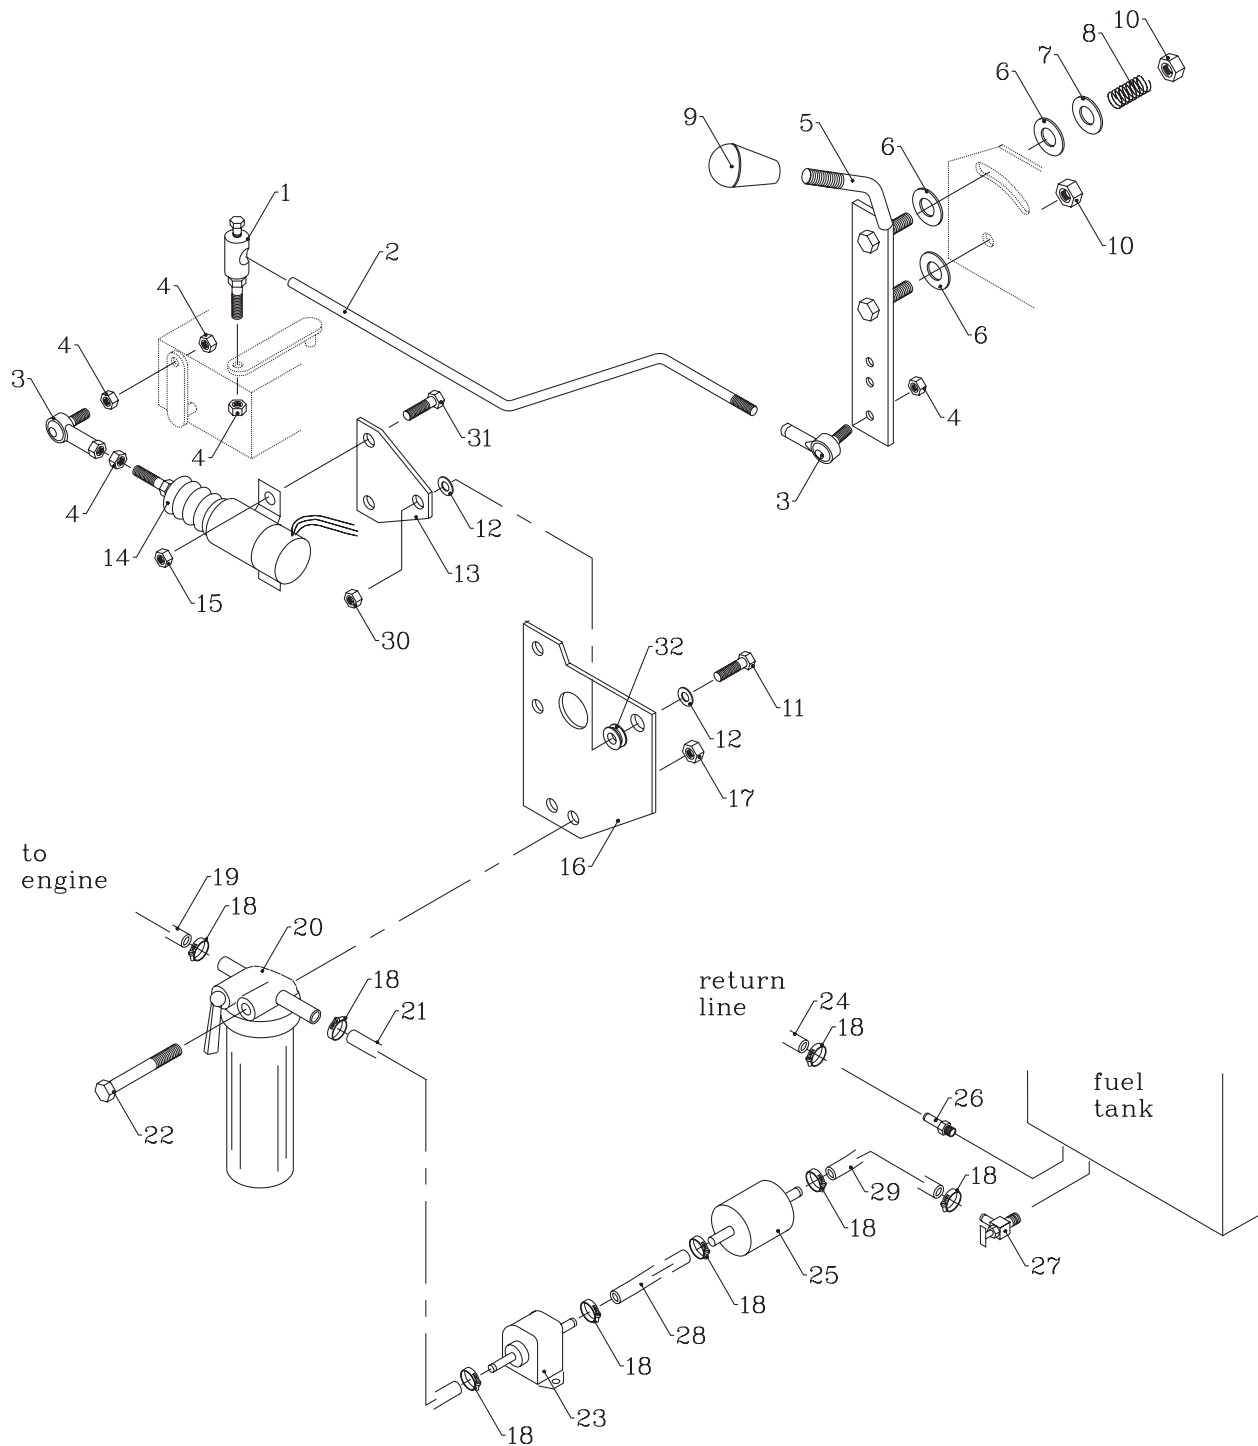

PARTS LIST for FIGURE 4 (Serial No. 1001 - 1641)


Ref	Part no.	Description	Quantity
1	43-004DC	Rod End	1
2	42-391	Throttle Link	1
3	43-004S	Rod End	2
4	93-04	Nut, 1/4 NF	4
5	40-235	Throttle Lever	1
6	05-028	Friction Washer	3
7	99-B16	Fender Washer, 3/8	1
8	41-039	Spring	1
9	47-001	Knob, Small	1
10	99-A05	Locknut, 5/16	3
11	90-0408	Bolt, 1/4 x 1	1
12	95-04	Flat Washer, 1/4 SAE	1
13	64-447	Solenoid Mount Plate	1
14	35-049	Solenoid	1
15	99-E20	Flange Nut, 1/4	2
16	64-446	Mounting Plate, Fuel Filter	1
17	92-05	Nut, 5/16	1
18	11-017	Hose Clamp	8
19	27-012-36	Fuel Line, 5/16 x 36	1
20	13-19204-43010	Fuel Filter Assembly	1
	13-15231-43560	Element, Fuel Filter	1
21	27-012-18	Fuel Line, 5/16 x 18	1
22	90-0520	Bolt, 5/16 x 2-1/2	1
23	13-68371-51211	Fuel Pump, Kubota Electric	1
24	27-001-88	Fuel Line, 1/4 x 88	1
25	13-021	Fuel Filter	1
26	29-058	Fitting	1
27	29-016	Fuel Valve	1
28	27-012-70	Fuel Line, 5/16 x 70	1
29	27-012-03	Fuel Line, 5/16 x 3	1
30	99-A04	Locknut, 1/4	1
31	99-K26	Flange Bolt, 1/4 x 3/4	2
32	05-025	Rubber Grommet	1

 

PARTS LIST for FIGURE 4A (Serial No. 1642 -)


Ref	Part no.	Description	Quantity
1	43-004DC	Rod End	1
2	42-391	Throttle Link	1
3	43-004S	Rod End	2
4	93-04	Nut, 1/4 NF	4
5	40-235	Throttle Lever	1
6	05-028	Friction Washer	3
7	99-B16	Fender Washer, 3/8	1
8	41-039	Spring, Compression 3/8 x 5/8	1
9	47-001	Knob, Small	1
10	99-A05	Locknut, 5/16	3
11	99-K26	Flange Bolt, 1/4 x 3/4	1
12	64-457	Cam Stop	1
13	99-E20	Flange Nut, 1/4	1
14	47-058	Cable, Fuel Shut Off	1
15	01-004	Nut, #8-32	1
16	01-005	Lock Washer, #8	1
17	64-656	Fuel Filter Bracket (Serial No. 1642 - 2999)	1
	64-744	Fuel Filter Bracket (Serial No. 3000 -)	1
18	11-017	Small Hose Clamp	8
19	27-012-36	Fuel Line, 5/16 x 36 (Serial No. 1642 - 2999)	1
	27-012-23	Fuel Line, 5/16 x 23 (Serial No. 3000 -)	1
20	13-19204-43010	Assembly, Fuel Filter	1
	13-15231-43560	Element, Fuel Filter	1
21	27-012-18	Fuel Line, 5/16 x 18 (Serial No. 1642 - 2999)	1
	27-012-10	Fuel Line, 5/16 x 10 (Serial No. 3000 -)	1
22	90-0520	Bolt, 5/16 x 2-1/2	1
23	13-68371-51211	Electric Fuel Pump	1
24	27-001-88	Fuel line, 1/4 x 88	1
25	13-021	Fuel Filter	1
26	29-058	Fitting	1
27	29-016	Fitting, Valve	1
28	27-012-70	Fuel Line, 5/16 x 70	1
29	27-012-03	Fuel line, 5/16 x 3	1
30	13-152-0155	Stop Collar for 47-058	1
31	01-002	Screw, 8-32 X 1/2	1
32	45-044	Cable Clamp	1
33	64-650	Bracket, Cable Anchor	1
34	99-K28	Flange Bolt, 5/16 x 1/2 (Serial No. 3000 -)	2
35	99-E12	Flange Nut, 5/16 (Serial No. 3000 -)	2

**Kubota Cooling
System
Figure 5**

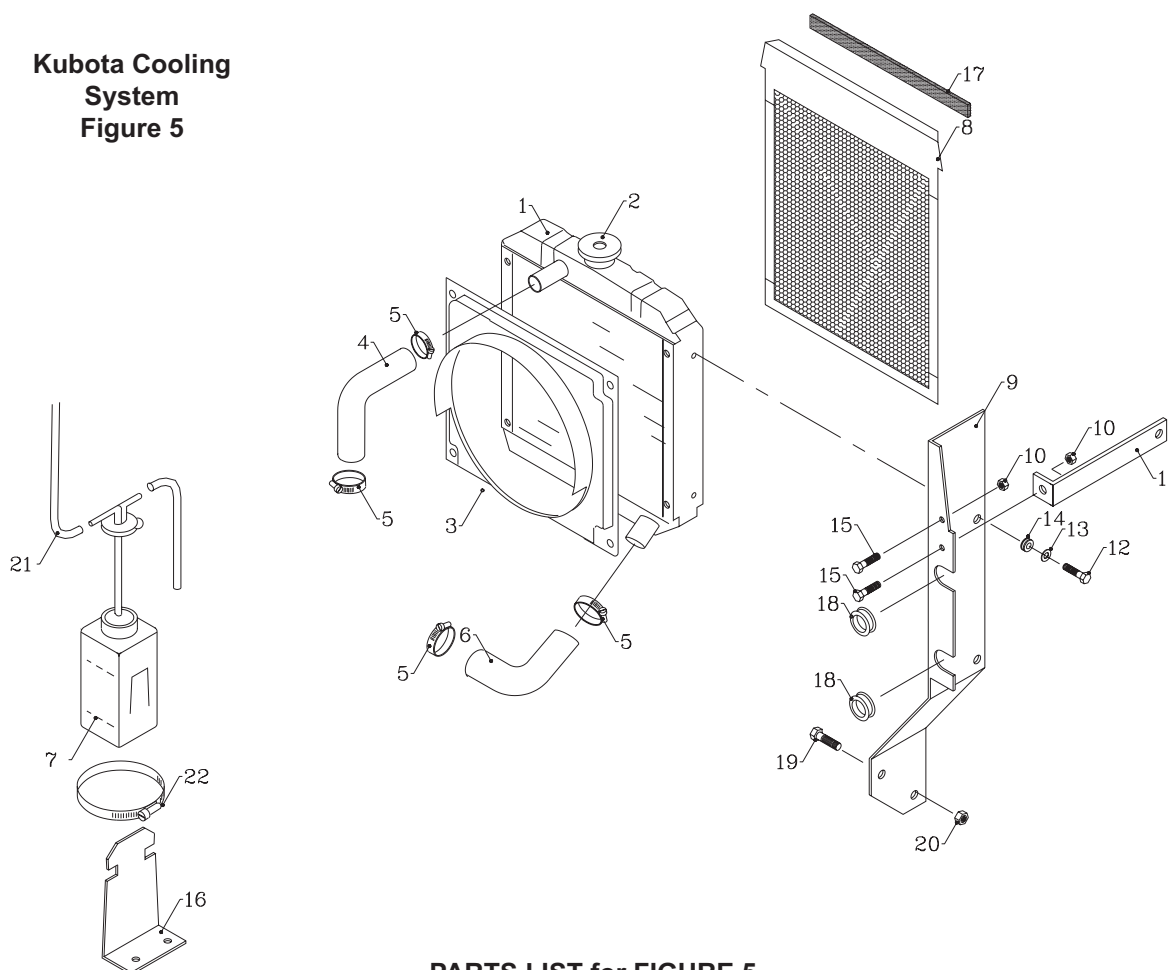


PARTS LIST for FIGURE 5

Ref	Part no.	Description	Quantity
1	13-15549-72060	Radiator	1
2	13-15272-72021	Radiator Cap	1
3	14-044	Radiator Fan Shroud	1
4	13-15531-72940	Hose, Upper Radiator	1
5	11-022	Hose Clamp	1
6	13-15531-72850	Hose, Lower Radiator	1
7	13-036	Coolant Recovery Bottle	1
8	60-433	Screen, Radiator (Serial No. 1001 - 2999)	1
	60-582	Screen, Radiator (Serial No. 3000 -)	1
9	60-423	Radiator Support, Left	1
	60-424	Radiator Support, Right	1
10	99-E20	Flange Nut, 1/4	3
11	64-455	Support Strap, Left	1
	64-456	Support Strap, Right	1
12	07-0610020	Bolt, M6 x 20	4
13	94-05	Flat Washer, 5/16	4
14	05-025	Rubber Grommet	4
15	99-K26	Flange Bolt, 1/4	3
16	64-445	Bracket, Coolant Recovery (Serial No. 1001 - 2999)	1
	64-743	Bracket, Coolant Recovery (Serial No. 3000 -)	1
17	56-003-16	Weatherstrip, 15-1/2"	1
18	05-032	Grommet	3
19	99-K19	Flange Bolt, 5/16 x 3/4	4
20	99-E12	Flange Nut, 5/16	4
21	56-034-34	Hose, 9/32 x 34	1
22	11-020	Hose Clamp	1

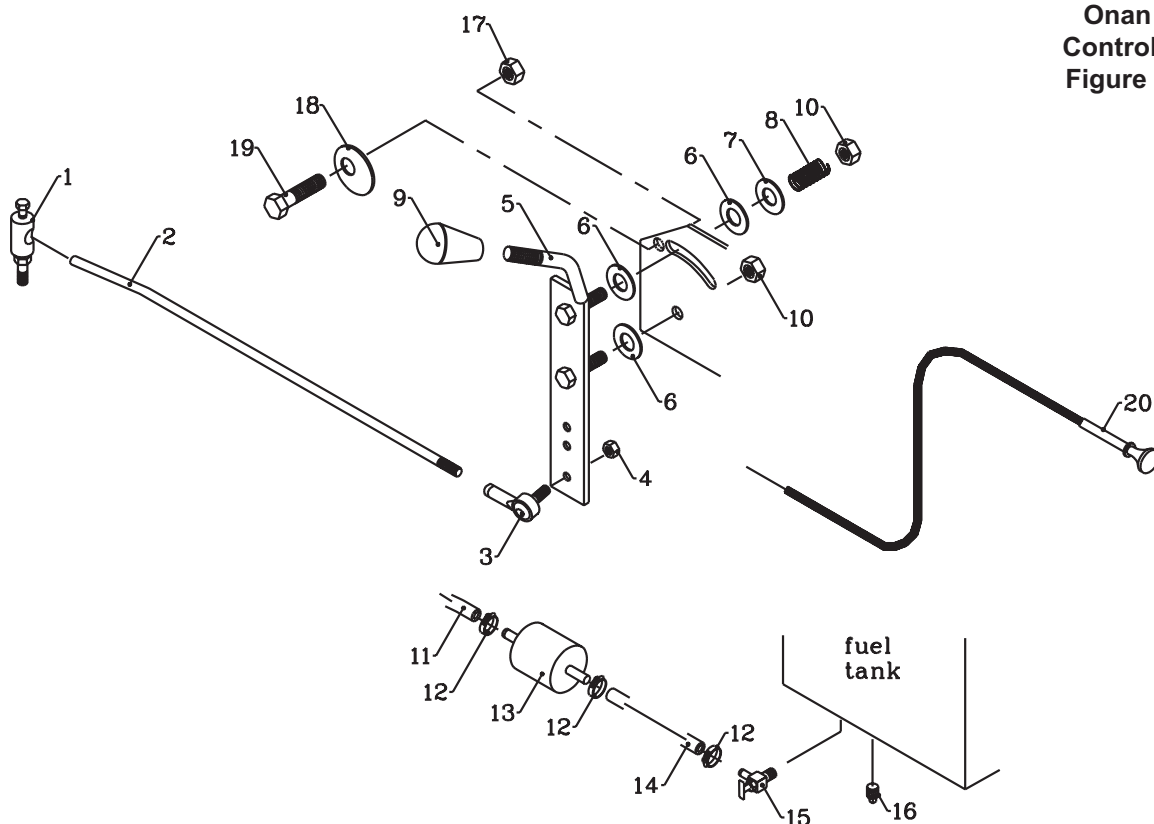Onan
Controls
Figure 8**PARTS LIST for FIGURE 8**

Ref	Part no.	Description	Quantity
1	43-004DC	Rod End, Special	1
2	42-395	Throttle Rod	1
3	43-004S	Rod End	1
4	93-04	Nut, 1/4 NF	1
5	40-235	Throttle Lever	1
6	05-028	Friction Washer	3
7	99-B16	Fender Washer	1
8	41-039	Spring	1
9	47-001	Knob, Small	1
10	99-A05	Locknut, 5/16	1
11	27-001-80	Fuel line, 1/4 x 80"	1
12	11-017	Hose Clamp	4
13	13-021	Fuel Filter	1
14	27-001-03	Fuel Line, 1/4 x 3"	1
15	29-016	Fuel Valve	1
16	29-061	Pipe Plug, 1/8"	1
17	99-E20	Flange Nut, 1/4	1
18	64-457	Cam Stop	1
19	99-K26	Flange Bolt, 1/4 x 3/4	1
20	47-023	Choke Cable	1

Onan Parts
Figure 7
(Serial No. 1001 - 1641)

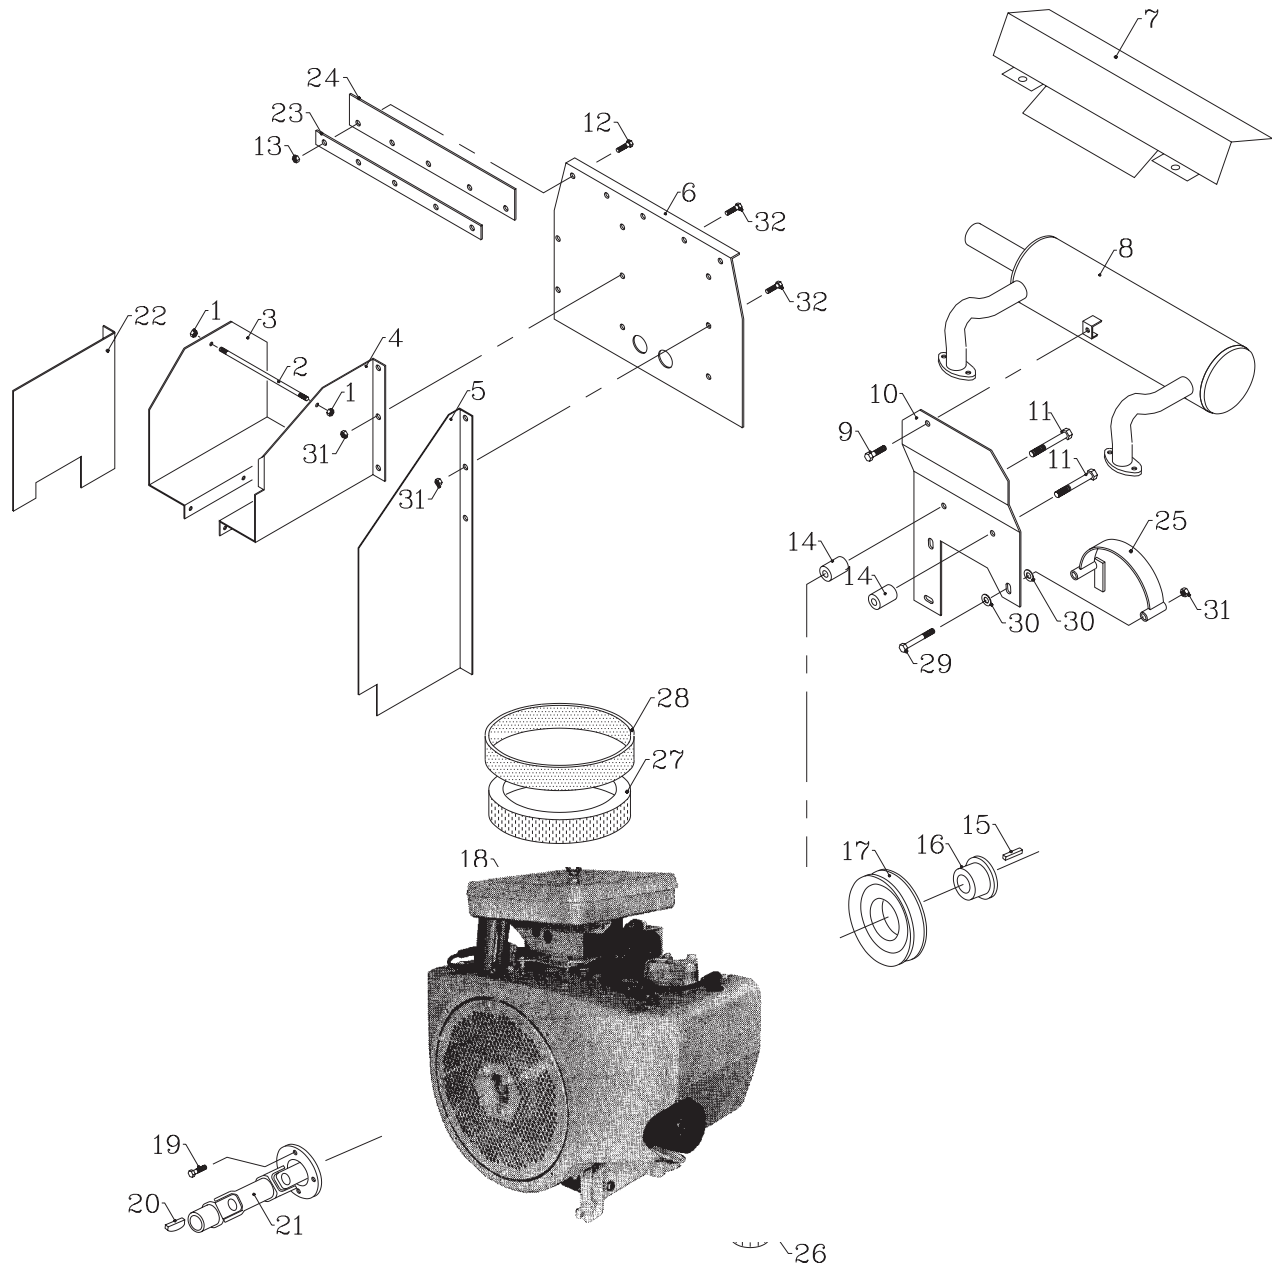


PARTS LIST for FIGURE 7 (Serial No. 1001 - 1641)

Ref	Part no.	Description	Quantity
1	92-04	Nut, 1/4	2
2	90-0460	Bolt, 1/4 x 7-1/2	1
3	60-443	Battery Box, Left Side	1
4	60-444	Battery Box, Right Side	1
5	60-496	Panel, Right	1
6	60-445	Panel, Airflow	1
7	60-447	Muffler Shield	1
8	13-155-2245-02	Muffler	1
9	90-0506	Bolt, 5/16 x 3/4	1
10	64-578	Muffler Support	1
11	90-0616	Bolt, 3/8 x 2	2
12	99-K26	Flange Bolt, 1/4 x 3/4	5
13	99-E20	Flange Nut, 1/4	5
14	64-478	Spacer	2
15	85-K0410	Key	1
16	83-H18	Bushing	1
17	83-BK60H	Pulley	1
18	13-040	Onan Engine, P224 Complete	1
19	90-0506	Bolt, 5/16 x 3/4	4
20	85-W0305	Woodruff Key	1
21	87-134	Drive Shaft Assembly	1
22	60-497	Panel, Left	1
23	64-462	Retainer Strap	1
24	44-095	Belting	1
25	64-477	Belt Retainer	1
26	13-122-0800	Oil Filter	1
27	13-140-2628-02	Air Filter	1
28	13-140-1912	Air Filter Precleaner	1
29	90-0522	Bolt, 5/16 x 2-3/4	2
30	95-05	Flat Washer, 5/16 SAE	4
31	99-E12	Flange Nut, 5/16	12
32	99-K28	Flange Bolt, 5/16 x 1/2	10
*	13-010	Spark Plug	2

* Not Illustrated

Onan Parts
Figure 7A
(Serial No. 1642 -)

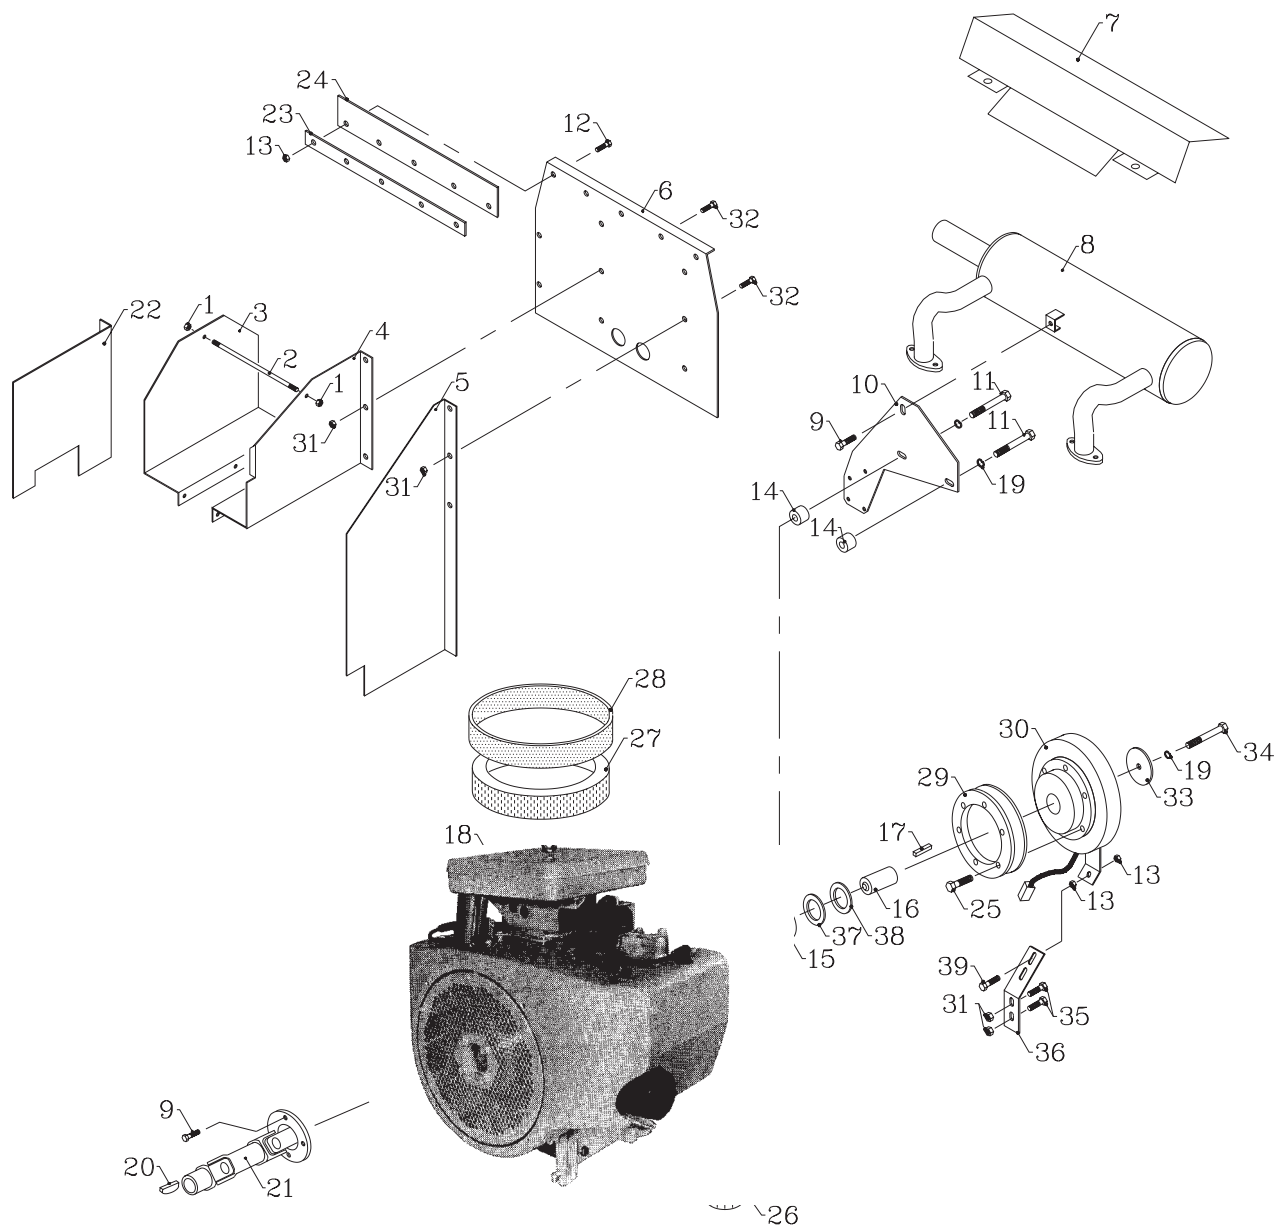


PARTS LIST for FIGURE 7A (Serial No. 1642 -)

Ref	Part no.	Description	Quantity
1	92-04	Nut, 1/4	2
2	90-0460	Bolt, 1/4 x 7-1/2	1
3	60-443	Battery Box, Left Side	1
4	60-444	Battery Box, Right Side	1
5	60-496	Panel, Right	1
6	60-445	Panel, Airflow	1
7	60-447	Muffler Shield	1
8	13-155-2245-02	Muffler	1
9	90-0506	Bolt, 5/16 x 3/4	5
10	64-654	Muffler Support	1
11	90-0614	Bolt, 3/8 X 1-3/4	2
12	99-K26	Flange Bolt, 1/4 x 3/4	6
13	99-E20	Flange Nut, 1/4	7
14	64-657	Spacer, Muffler Support	2
15	64-652	Spacer, Clutch	1
16	80-239	Shaft Extension	1
17	85-K0428	Key, 1/4 x 1/4 x 3-1/2	1
18	13-040	Onan Engine, P224 Complete	1
19	96-06	Lock Washer, 3/8	2
20	85-W0305	Woodruff Key	1
21	87-134	Drive Shaft Assembly	1
22	60-497	Panel, Left	1
23	64-462	Retainer Strap	1
24	44-095	Belting	1
25	07-0812525D912	Metric Bolt, M8-1.25 x 25 Socket Head	6
26	13-122-0800	Oil Filter	1
27	13-140-2628-02	Air Filter	1
28	13-140-1912	Air Filter Precleaner	1
29	83-033	Pulley, Electric Clutch	1
30	86-051	Electric Clutch	1
31	99-E12	Flange Nut, 5/16	14
32	99-K28	Flange Bolt, 5/16 x 1/2	10
33	64-906	Washer, Clutch Retaining	1
34	91-0628	Bolt, 3/8 x 3-1/2 NF	2
35	99-K02	Flange Bolt, 5/16 x 1"	2
36	64-653	Bracket, Clutch Anchor	1
37	99-B36	Machinery Washer, 1-1/8 x 10 ga.	1
38	99-B37	Machinery Washer, 1-1/8 x 18 ga.	1
39	90-0410	Bolt, 1/4 x 1-1/4	1
*	13-167-0272	Spark Plug, (Champion RS17YX)	2

* Not Illustrated

Kubota Optional Outboard Bearing Kit**Part No. 70-084**


This outboard bearing was installed as production after Serial No. 3098.

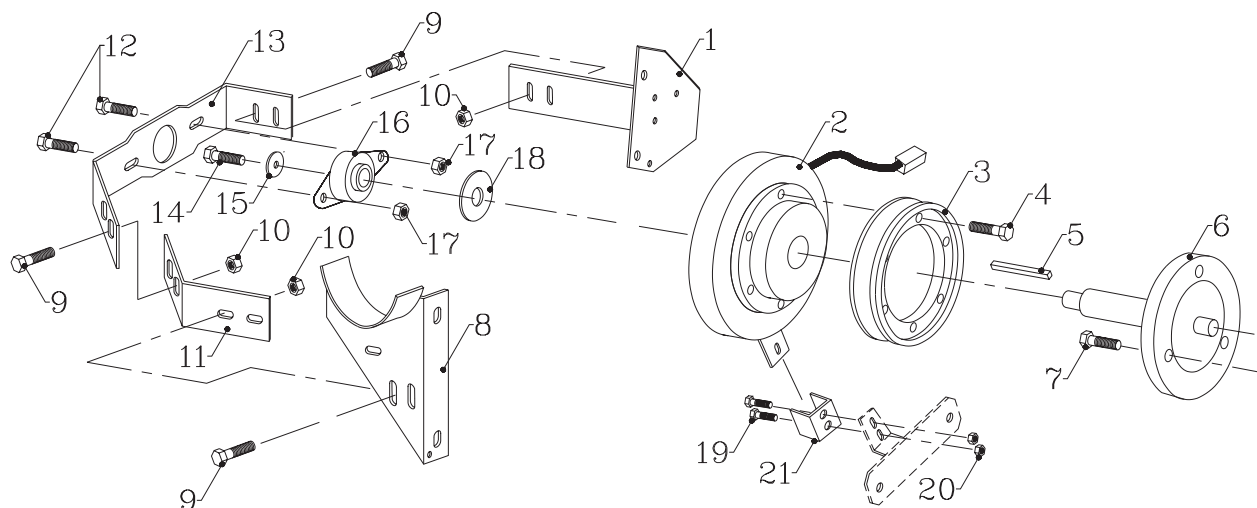**Parts List for 425 Kubota Outboard Bearing Kit**

Ref	Part No.	Description	Quantity
1	62-813	Bracket Mounting, Right Side	1
2	86-051	Electric Clutch (not included in kit)	1
3	83-033	Pulley, Electric Clutch	1
4	07-0812525D912	Metric Bolt, M8-1.25 x 25 Socket Head	6
5	85-K0428	Key, 1/4 x 1/4 x 3-1/2	1
6	87-174	Stub Shaft	1
7	07-1012525	Metric Bolt, M10-1.25 x 25	3
8	60-426	Muffler Support	1
9	99-K19	Flange Bolt, 5/16 x 3/4	6
10	99E12	Flange Nut, 5/16	6
11	64-812	Plate, Support, Left Side	1
12	99-K11	Flange Bolt, 3/8 x 3/4	2
13	64-811	Mount, Outboard Bearing Front	1
14	91-0610	Bolt, 3/8 x 1-1/4 NF	1
15	99-B40	Washer, 3/8 x 1 x 1/4	1
16	6550001	Flange Bearing	1
17	99-E13	Flange Nut, 3/8	2
18	64-906	Washer, Clutch Retainer	1
*	60-620	Grille Insert	1
19	99-K31	Bolt, Flange 1/4 x 1/2	2
20	99-E20	Flange Nut, 1/4	2
21	64-826	Clevis, Clutch Tab	1

* Not Illustrated

Primary Hydraulic
System
Figure 9
(Serial No. 1001 - 2999)

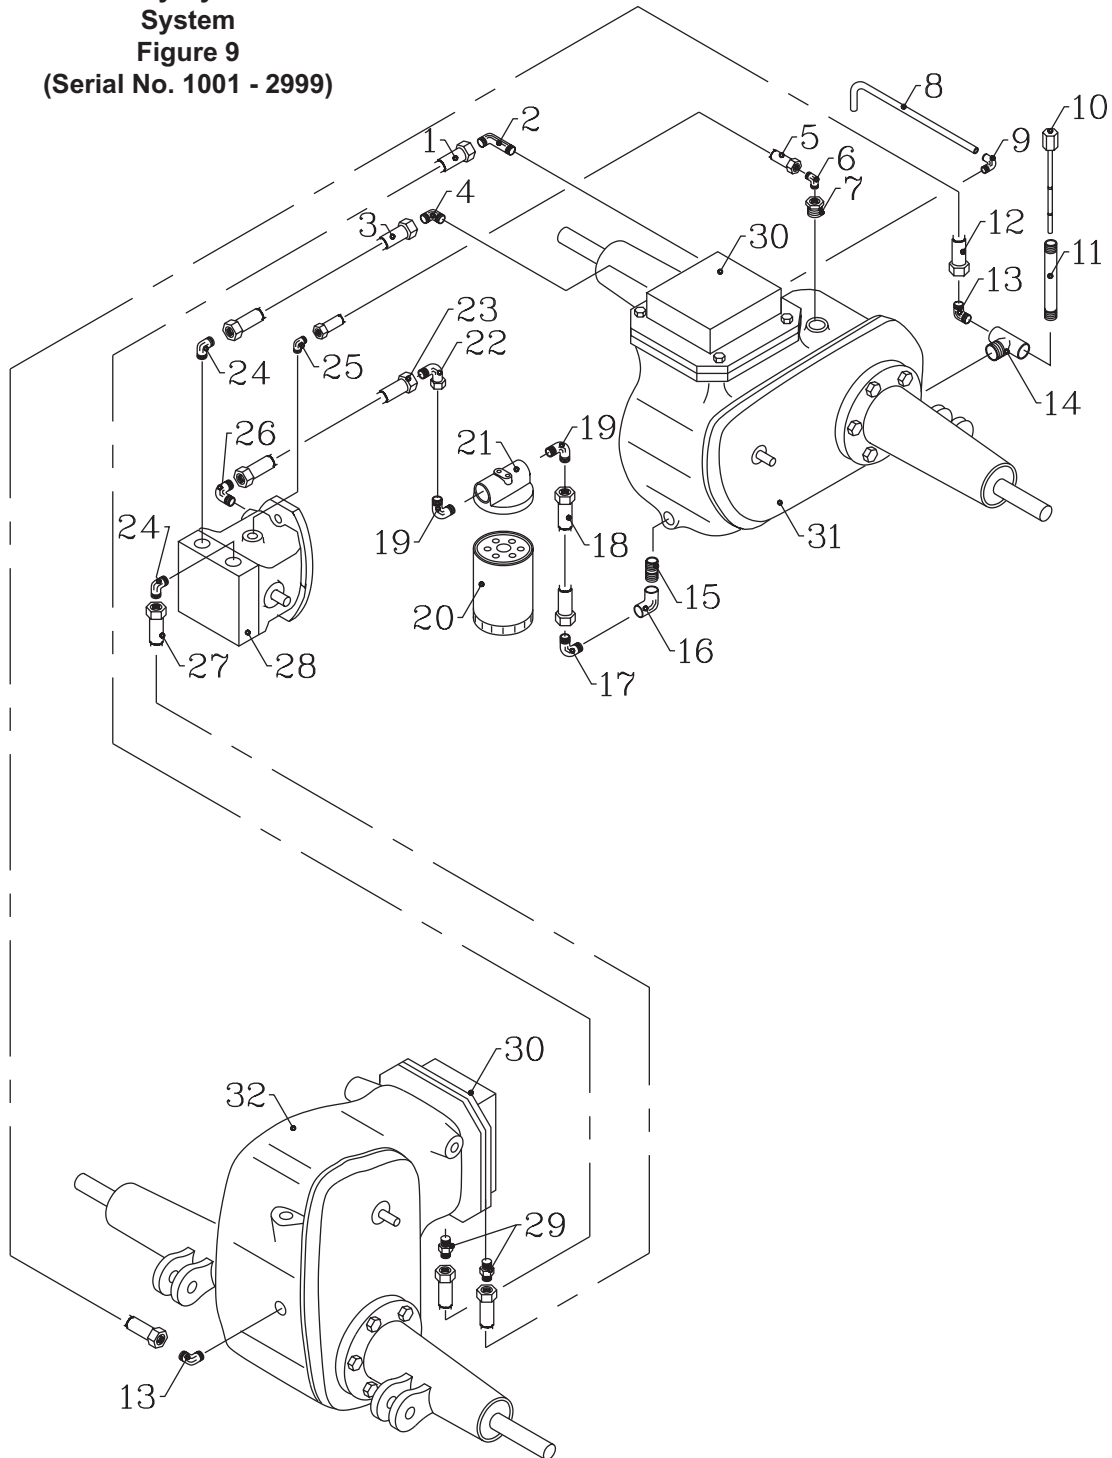


PARTS LIST for FIGURE 9 (Serial No. 1001 - 2999)

Ref	Part no.	Description	Quantity
1	20-067	Hose, 1/2 x 40	1
2	25-6801-LL-8	Fitting	1
3	20-066	Hose, 1/2 x 18	1
4	25-2503-8-8	Fitting	1
5	22-025	Hose 3/8 x 31	1
6	25-2103-4-6	Fitting 90°, (Serial No. 1001 - 1391)	1
	25-2103-4-6	Fitting 90°, (Serial No. 1392 -)Kubota only	1
	25-2103-6-6	Fitting 90°, (Serial No. 1392 -)Onan only	1
7	25-0502-10-4	Fitting, (Serial No. 1001 - 1391)	1
	25-0502-10-4	Fitting, (Serial No. 1392 -)Kubota only	1
	25-7238-10	Plug, (Serial No. 1392 -) Onan only	1
8	56-034-12	Vinyl Tube, 12"	1
9	29-047	Fitting	1
10	24-001	Dipstick	1
11	29-011	Pipe Nipple, 3/8 x 6	1
12	22-024	Hose, 1/2 x 65	1
13	25-2103-6-8	Fitting	2
14	25-212T-6-6	Tee Fitting	1
15	29-039	Pipe Nipple	1
16	29-040	Pipe Elbow, 45 degree	1
17	25-3103-6-10	Fitting	1
18	22-026	Hose, 5/8 x 8-1/2	1
19	25-2103-8-10	Fitting	2
20	21-001	Filter, Hydraulic Oil	1
21	21-058	Filter, Head	1
22	25-3903-10-10	Swivel Fitting	1
23	22-027	Hose, 5/8 x 6-1/4	1
24	25-3503-8-8	Fitting	2
25	25-2503-8-6	Fitting	1
26	25-2503-8-10	Fitting	1
27	20-068	Hose, 1/2 x 50	1
28	21-074	Hydraulic Pump, Sundstrand 15-2168	1
29	25-0503-8-8	Fitting	2
30	21-004	Hydraulic Motor	2
*	21-005	Gasket, Hydraulic Motor	1
31	51-027	Transaxle Assembly, Front Kubota (SN 1001 - 1514)	1
	51-033	Transaxle Assembly, Front Kubota (SN 1515 -)	1
	51-027	Transaxle Assembly, Front Onan (SN 1001 - 1391)	1
	50-070	Transaxle Assembly, Front Onan (SN 1392 - 1514)	1
	50-073	Transaxle Assembly, Front Onan (SN 1515 - 2999)	1
32	51-027	Transaxle Assembly, Rear (Serial No. 1001 - 1514)	1
	51-033	Transaxle Assembly, Rear (Serial No. 1515 - 2999)	1
*	15-010	Steiner Trans-Hydraulic Oil, 5 Gal. (2 - 2.5 gal.)	1
*	15-012	Steiner Trans-Hydraulic Oil, Quart	1

* Not Illustrated


**Primary Hydraulic
System
Figure 9A
(Serial No. 3000 -)**

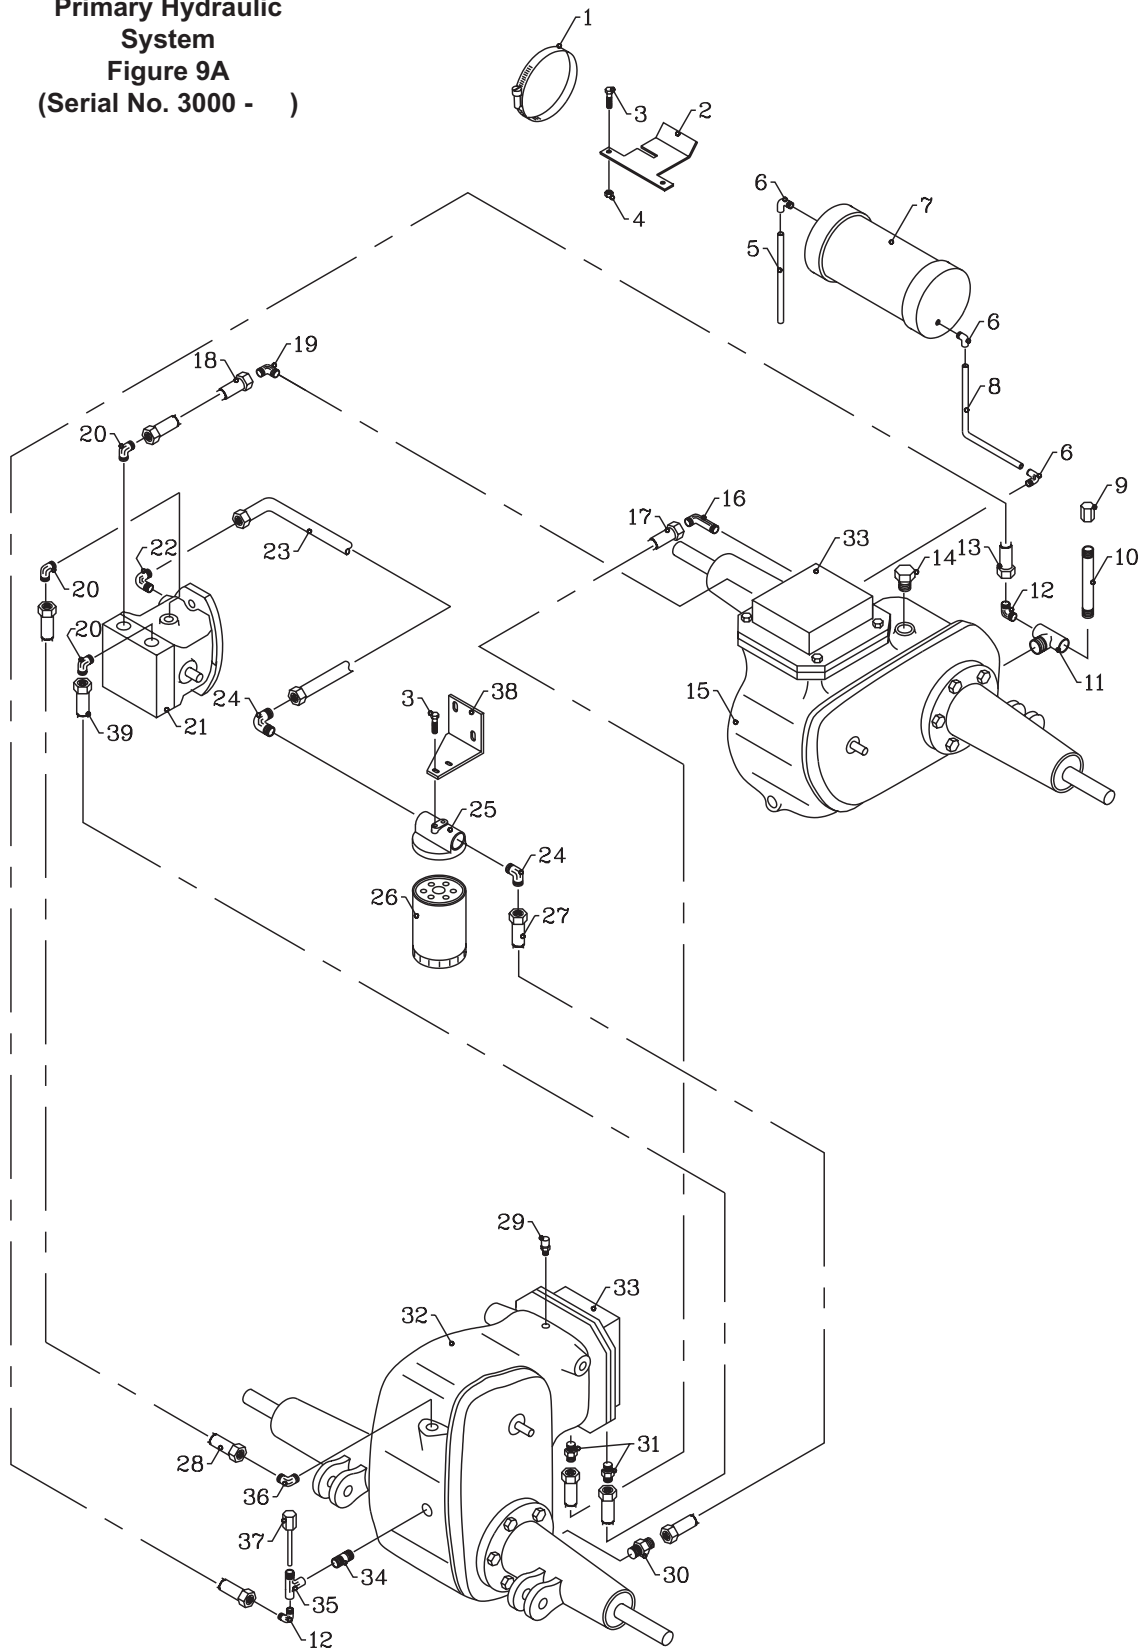

PARTS LIST for FIGURE 9A (Serial No. 3000 -)

Ref	Part no.	Description	Quantity
1	11-029	Hose Clamp	1
2	60-584	Mount, Hydraulic Expansion Tank	1
3	99-K26	Flange Bolt, 1/4 x 3/4	4
4	99-E20	Flange Nut, 1/4	2
5	27-001-20	Tubing, 1/4 x 20	1
6	29-047	Fitting, 90 deg.	3
7	24-039	Expansion Tank	1
8	27-001-30	Tubing, 1/4 x 30	1
9	29-032	Hex Pipe Cap, 3/8	1
10	29-011	Pipe Nipple, 3/8 x 6	1
11	25-212T-6-6	Fitting, Tee	1
12	25-2103-6-8	Fitting, 90 Degree	2
13	22-024	Hose, 1/2 x 65	1
14	25-7238-10	Plug, Special (Onan only)	1
	25-05CP-10	Fitting, Cap (Kubota only)	1
15	51-033	Transaxle Assembly	1
16	25-6801-LL-8	Fitting, 90 Degree, O-Ring	1
17	20-067	Hose, 1/2 x 40	1
18	20-066	Hose, 1/2 x 18	1
19	25-2503-8-8	Fitting, 90 Degree, O-Ring	1
20	25-3503-8-8	Fitting, 45 Degree, O-Ring	3
21	21-074	Hydraulic Pump, Sundstrand 15-2168	1
22	24-040	Fitting, Special 90 deg.	1
23	23-062	Tube, Steel Hydraulic	1
24	25-2103-12-12	Fitting, 90 deg.	2
25	21-073	Filter Head with 3/4" ports	1
26	21-093	Filter Element, Hydraulic	1
27	22-041	Hose, 3/4 x 43-1/2	1
28	22-044	Hose, 1/2 x 70	1
29	29-106	Fitting, Vented with Cap	1
30	24-037	Fitting	1
31	25-0503-8-8	Fitting	2
32	50-084	Transaxle	1
33	21-004	Motor, Hydraulic	2
	21-005	Gasket, Motor	2
34	29-039	Pipe Nipple	1
35	25-012T-6-6	Fitting, Tee	1
36	25-3103-6-8	Fitting, 45 deg.	1
37	24-041	Dipstick, Hydraulic Oil	1
38	64-753	Mount, Hydraulic Filter	1
39	20-068	Hose, 1/2 x 50	1
*	15-010	Steiner Trans-Hydraulic Oil, 5 Gal. (2 - 2.5 gal.)	1
*	15-012	Steiner Trans-Hydraulic Oil, Quart	1

Implement
Hydraulic System
Figure 10

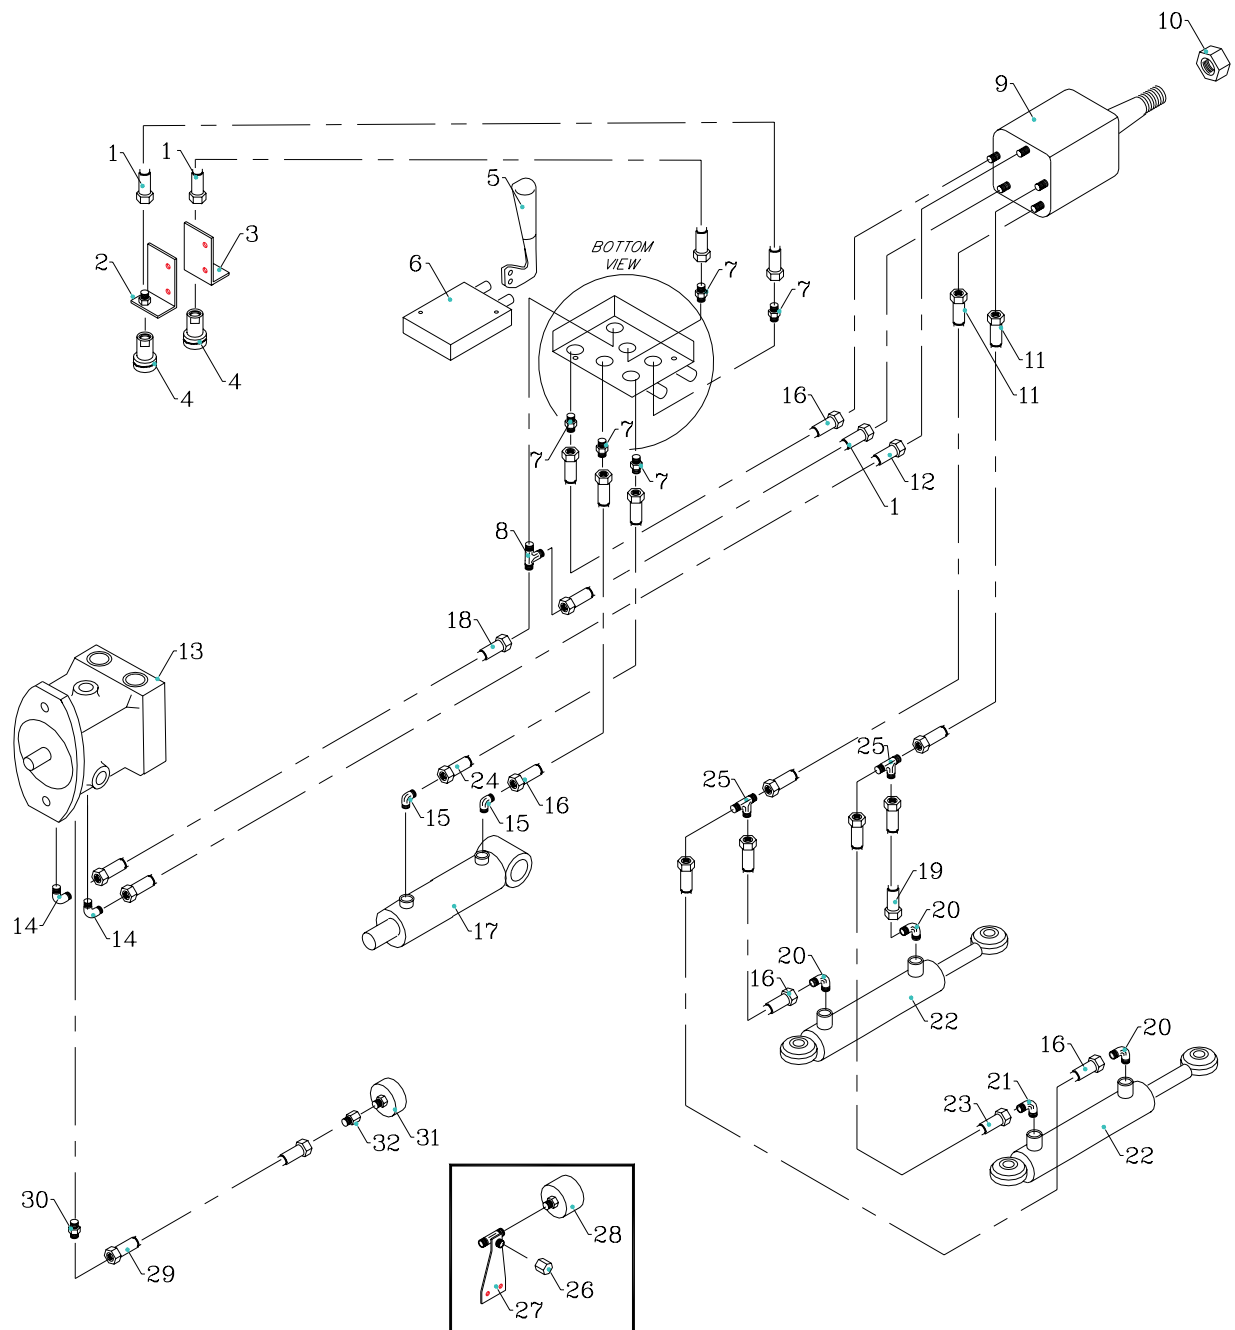


PARTS LIST for FIGURE 10

Ref	Part no.	Description	Quantity
1	20-026	Hose, 1/4 x 17	3
2	64-219	Bracket, Front Coupler	1
3	64-180	Bracket, Rear Coupler	1
4	23-003	Coupler, Female	2
*	23-033	Dust Plug, Coupler	2
5	23-038	Handle	2
6	23-035	Valve Body, Complete Assembly	1
	23-30029249	Seal Kit, Valve	1
	23-1607-11	Detent, Spool for 23-035	1
7	25-0503-6-6	Fitting	5
8	25-053T-6-6	Fitting	1
9	23-054	Steering Valve, Priority Port	1
	21-SK000011	Seal Kit, Steering Valve	1
10	99-E11	Nut, Steering Valve	1
11	20-027	Hose, 1/4 x 22	2
12	20-007	Hose, 1/4 x 20	1
13	21-074	Pump, Sundstrand 15-2217	1
14	25-2503-6-6	Fitting	2
15	25-2103-6-6	Fitting	2
16	20-064	Hose, 1/4 x 19	4
17	23-005	Lift Cylinder	1
	21-0A006763	Seal Kit, Lift Cylinder	1
18	20-028	Hose, 1/4 x 28	1
19	20-006	Hose, 1/4 x 24	1
20	25-2103-4-6	Fitting	3
21	25-3103-4-6	Fitting	1
22	23-053	Steering Cylinder	2
	21-0A009066	Seal Kit, Steering Cylinder	1
23	20-030	Hose, 1/4 x 14	1
24	20-065	Hose, 1/4 x 25	1
25	25-033T-6-6	Fitting	2
26	25-6CP-6	Cap (Serial No. 1001 - 2999)	1
27	64-467	Fitting w/bracket, (Kubota Only) (Serial No. 1001 - 2999)	1
	64-490	Fitting w/bracket, (Onan Only) (Serial No. 1001 - 2999)	1
28	31-018	Oil Pressure Switch, Hydraulic (Serial No. 1001 - 2999)	1
29	20-069	Hose, 1/4 x 16 (Kubota Only) (Serial No. 1001 - 2999)	1
	20-070	Hose, 1/4 x 31 (Kubota Only) (Serial No. 3000 -)	1
	20-070	Hose, 1/4 x 31 (Onan Only)	1
30	25-0103-2-4	Fitting	1
31	35-072	Pressure Gauge (Serial No. 3000 -)	1
	11-035	Clamp for 35-072 (Serial No. 3000 -)	1
32	25-0203-4-6	Fitting (Serial No. 3000 -)	1

* Not Illustrated


Sundstrand
Series 15
Pump Parts
Figure 22

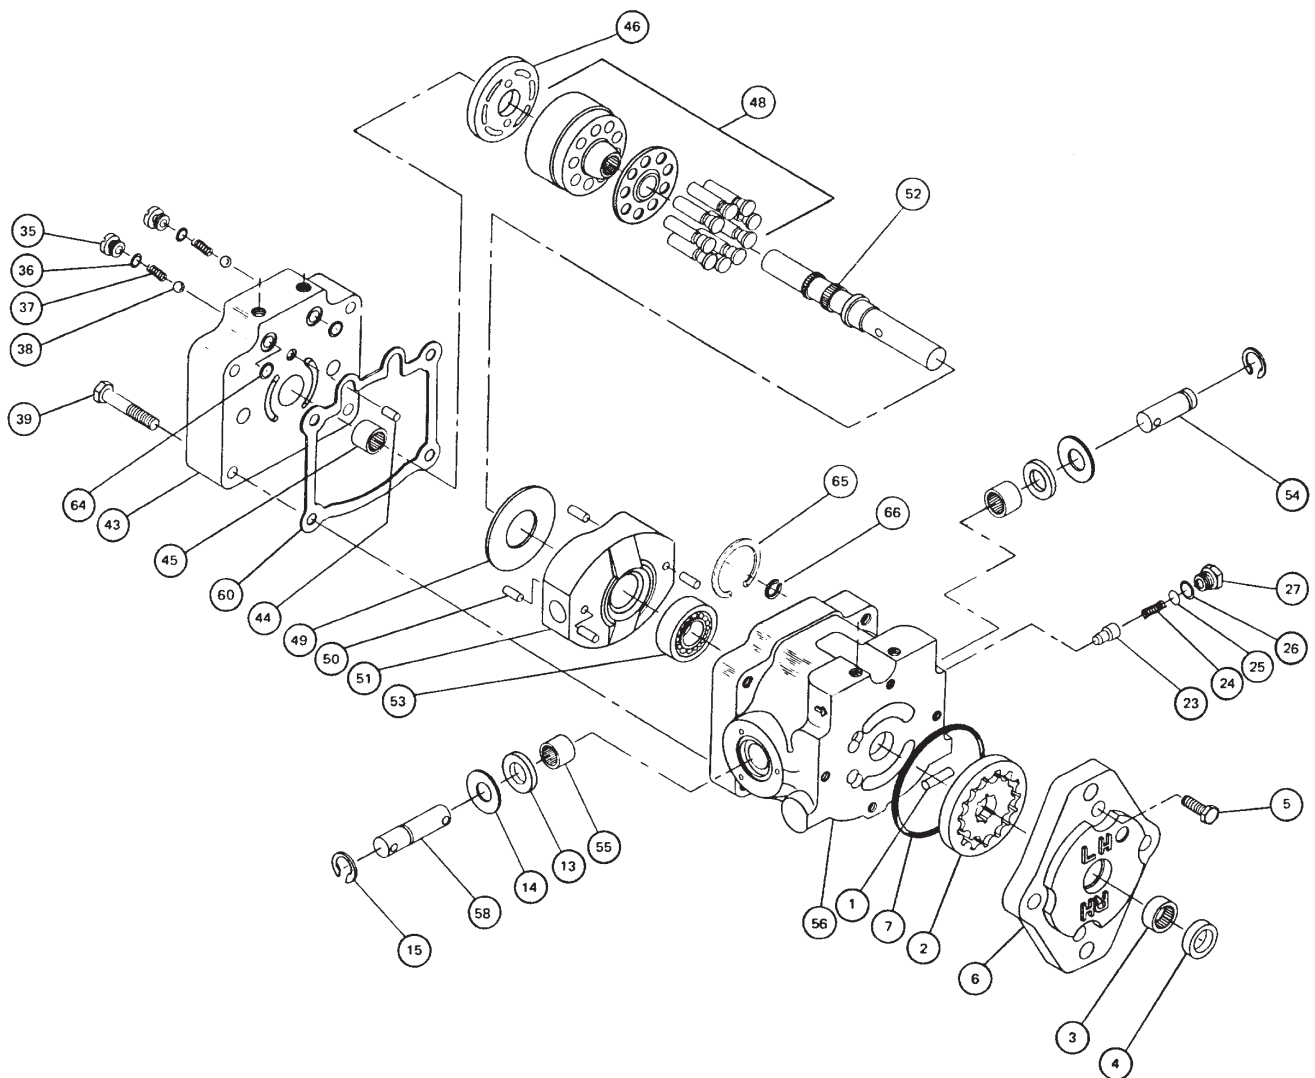

PARTS LIST for FIGURE 22


Ref	Part no.	Description	Quantity
1	21-041	Pin, Drive	1
2	21-027	Gerotor, Charge Pump	1
3	21-036	Bearing	1
4	21-048	Seal, Lip	1
5	21-046	Bolt	4
6	21-031	Housing, Charge Pump	1
7	21-038	O-Ring	1
13	21-047	Seal, Lip	2
14	21-049	Washer	2
15	21-045	Ring, Retaining	2
23-27	21-051	Relief Valve Kit	1
35-38	21-050	Check Valve Kit	1
43	21-023	End Cap, Pump	1
44	21-040	Pin, Locating	1
45	21-034	Bearing	1
46	21-026	Valve Plate, Pump	1
47	21-092	Ring, Retaining	1
48	21-029	Cylinder Block Kit (use 21-074 complete pump ass'y)	1
49	21-019	Plate, Thrust	1
50	21-039	Spring Pin	4
51	21-021	Swashplate, Variable	1
52	21-028	Shaft, Pump	1
53	21-032	Bearing	1
54	21-017	Shaft, Control	1
55	21-066	Bronze Bushing	1
56	21-052	Housing, Pump	1
58	21-018	Shaft, Control	1
60	21-020	Gasket	1
61	9004100-0120	O-Ring	1
62	9006110-0120	Backup Ring	1
63	3103786	Bypass Valve	1
64	21-037	O-Ring	2
65	21-042	Ring, Retaining	1
66	21-043	Ring, Retaining	1

**Sundstrand
Series 15
Motor Parts
Figure 23**

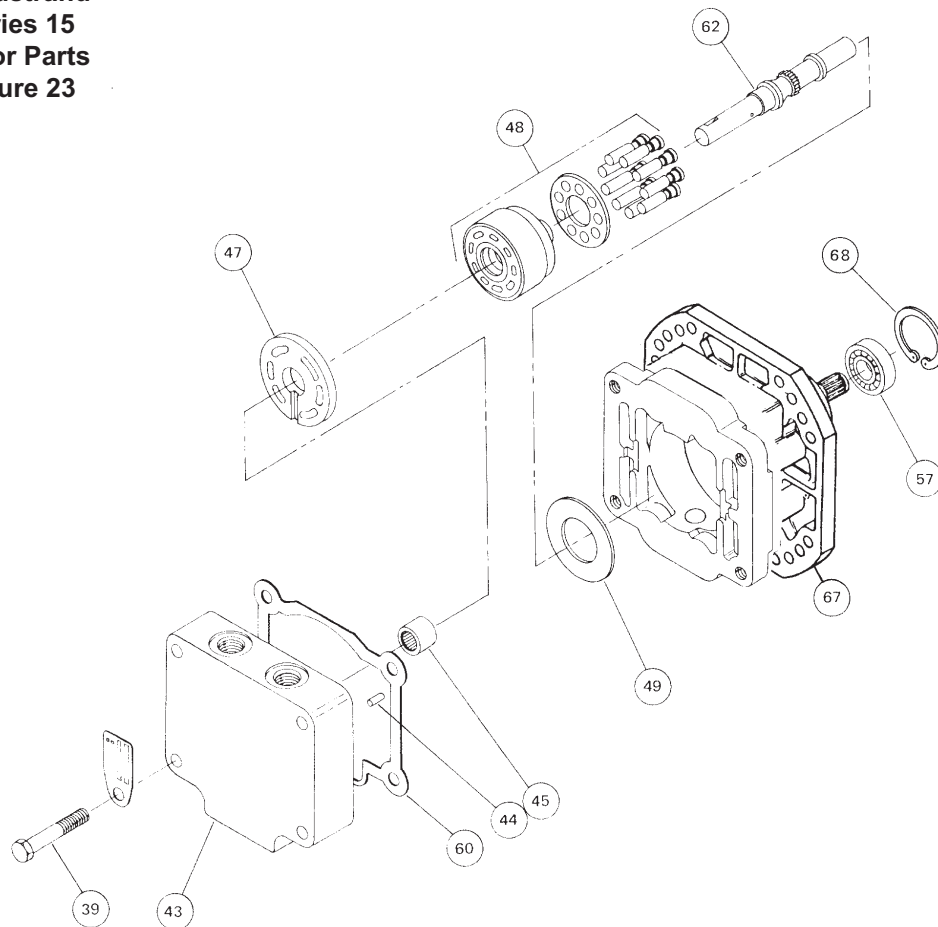

PARTS LIST for FIGURE 23

Ref	Part no.	Description	Quantity
43	21-024	End Cap, Motor	1
45	21-034	Bearing	1
47	21-025	Valve Plate, Motor	1
48	21-029	Cylinder Block Kit (use 21-004 complete motor ass'y)	1
49	21-019	Plate, Thrust	1
57	21-033	Bearing	1
60	21-020	Gasket	1
62	21-022	Shaft, Motor	1
67	21-030	Housing, Fixed	1
68	21-043	Ring, Retaining	1
69	21-092	Ring, Retaining	1

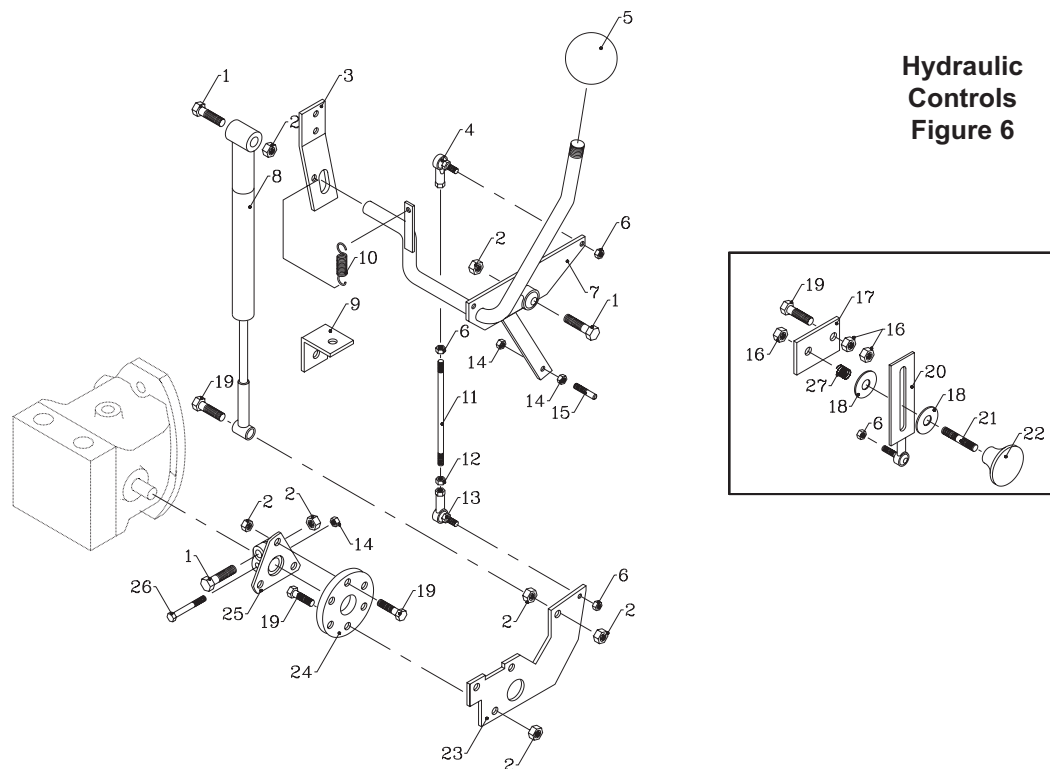


Hydraulic
Controls
Figure 6

PARTS LIST for FIGURE 6

Ref	Part no.	Description	Quantity
1	90-0614	Bolt, 3/8 x 1-3/4	3
2	92-06	Nut, 3/8	10
3	64-448	Bracket, F - R Lever	1
4	43-004S	Rod End	1
5	47-040	Knob	1
6	93-04	Nut, 1/4 NF	4
7	40-239	Lever, Forward - Reverse	1
8	42-417	Stabilizer	1
9	64-441	Bracket, Neutral Start Switch	1
10	41-013	Spring	1
11	42-392	Link, Forward - Reverse	1
12	93-04LH	Nut, 1/4 Left Hand Thread	1
13	43-004SL	Rod End, Left Hand Thread	1
14	99-E20	Flange Nut, 1/4	2
15	64-434	Neutral Pin	1
16	99-A06	Locknut, 3/8	2
17	64-450	Backing Plate, Friction Slide (Serial No. 1001 - 2999)	1
18	05-024	Friction Washer (Serial No. 1001 - 2999)	2
19	90-0610	Bolt, 3/8 x 1-1/4	8
20	64-437	Friction Slide (Serial No. 1001 - 2999)	1
21	42-393	Friction Slide Bolt (Serial No. 1001 - 2999)	1
22	47-003	Large Knob (Serial No. 1001 - 2999)	1
23	40-236	Pump Lever	1
24	87-113	Flexible Disk	1
25	64-623	Pump Lever Hub	1
26	90-0416	Bolt, 1/4 x 2	1
27	41-039	Spring, Compression 3/8 x 5/8 (Serial No. 1001 - 2999)	1

Peerless Transaxle
Model 2559
(Serial No. 1001 - 1514)
Figure 24

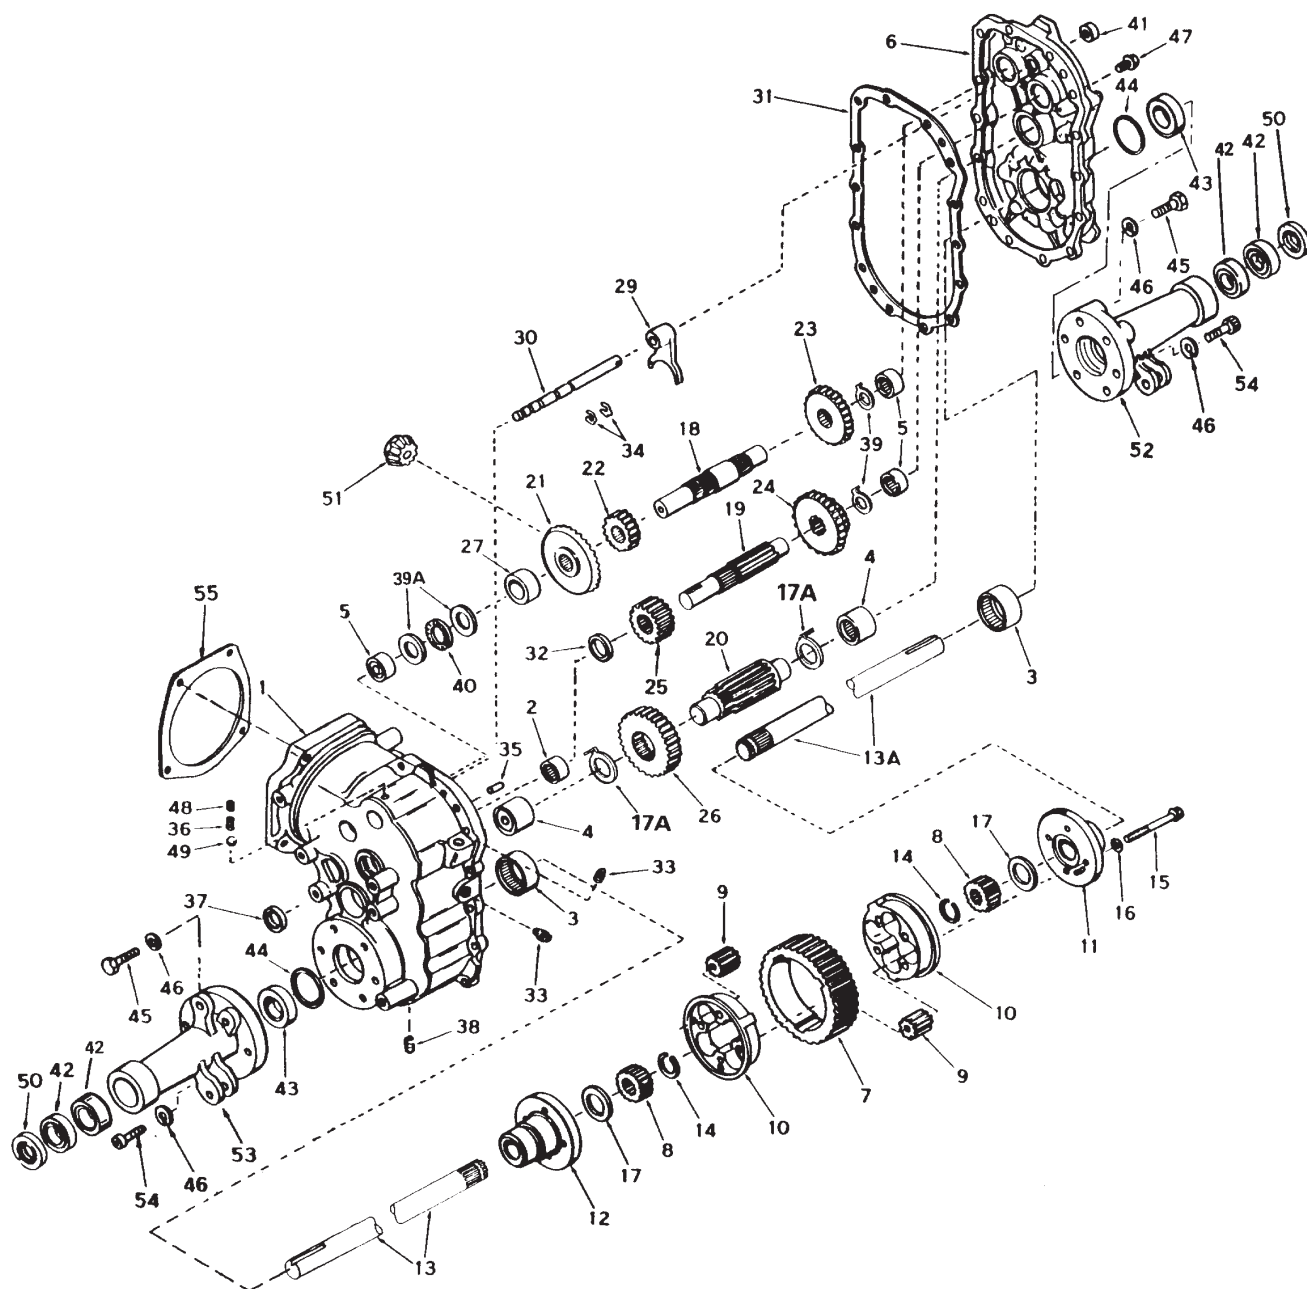


FRAME, DRIVE PARTS, AXLES

section 4

PARTS LIST for FIGURE 24

Ref	Part no.	Description	Quantity
Parts for all 425 tractors (Serial No. 1001 - 1514)			
1	51-770060B	Transaxle Case (Incl. Ref 2,3,4,5)	1
2	51-780097	Needle Bearing	1
3	51-780098	Needle Bearing	2
4	51-780099	Needle Bearing	2
5	51-780100	Needle Bearing	3
6	51-772065	Transaxle Cover (Incl. Ref 3,4,5)	1
7	51-778084	Ring Gear	1
8	51-778085	Side Gear	2
9	51-778086	Pinion Gear	8
10	51-786054	Core Body	2
11	51-774199	Differential Carrier	1
12	51-774200	Differential Carrier	1
13	51-774842	Left Axle, 22-1/8"	1
13A	51-774843	Right Axle, 21-1/4"	1
14	51-792062	Snap Ring	2
15	51-792063	Differential Bolt	4
16	99-G01	Lockwasher, 3/8	4
17	51-780101	Thrust Washer	2
17A	51-780141	Thrust Washer, Tabbed	2
18	51-776209	Counter Shaft	1
19	51-776119	Brake Shaft	1
20	51-776120	Output Pinion	1
21	51-778087	Bevel Gear, 30 teeth	1
22	51-778088	Spur Gear, 16 teeth	1
23	51-778099	Spur Gear, 20 teeth	1
24	51-778100	Cluster Gear	1
25	51-778102	Spur Gear, 17 teeth	1
26	51-778103	Output Gear, 33 teeth	1
27	51-786094	Spacer	1
29	51-784195	Shifter Fork	1
30	51-784196	Shifter Rod	1
31	51-788047	Gasket, Case (788047)	1
32	51-780005	Spacer	1
33	51-792010	Plug, Pipe	2
34	51-792064	Snap Ring	2
35	51-786026	Pin, Dowel	2
36	51-792003	Detent Spring	1
37	89-008	Oil Seal, Brake Shaft (788008)	1
38	51-792019	Magnetic Drain Plug	1
39	51-780157	Thrust Washer, Tabbed	2
39A	51-780045	Thrust Washer	2
40	51-780012	Thrust Bearing	1
41	89-007	Oil Seal, Shifter Shaft (788034)	1
42	51-780158	Bearing, Axle	4
43	51-780104	Thrust Bearing	2
44	51-021	O-Ring, Square Cut (788048)	2
45	90-0812	Screw, 1/2 x 1-1/2 Hex Head (792065)	4
46	96-08	Lockwasher, 1/2 (792066)	8
47	51-792067	Screw, 5/16 x 1"	14
48	51-792068	Detent Set Screw, 1/4 x 1/2	1
49	51-792004	Detent Ball	1
50	51-788073	Seal, Axle	2
51	51-011	Bevel Pinion (778093)	1
	04-002	Snap Ring	1
52	51-782070	Axle Housing, 11-7/32"	1
53	51-782070	Axle Housing, 11-7/32"	1
55	21-005	Gasket, Motor	1

Peerless Transaxle
Model 2562
(Serial No. 1515 -)
Figure 26

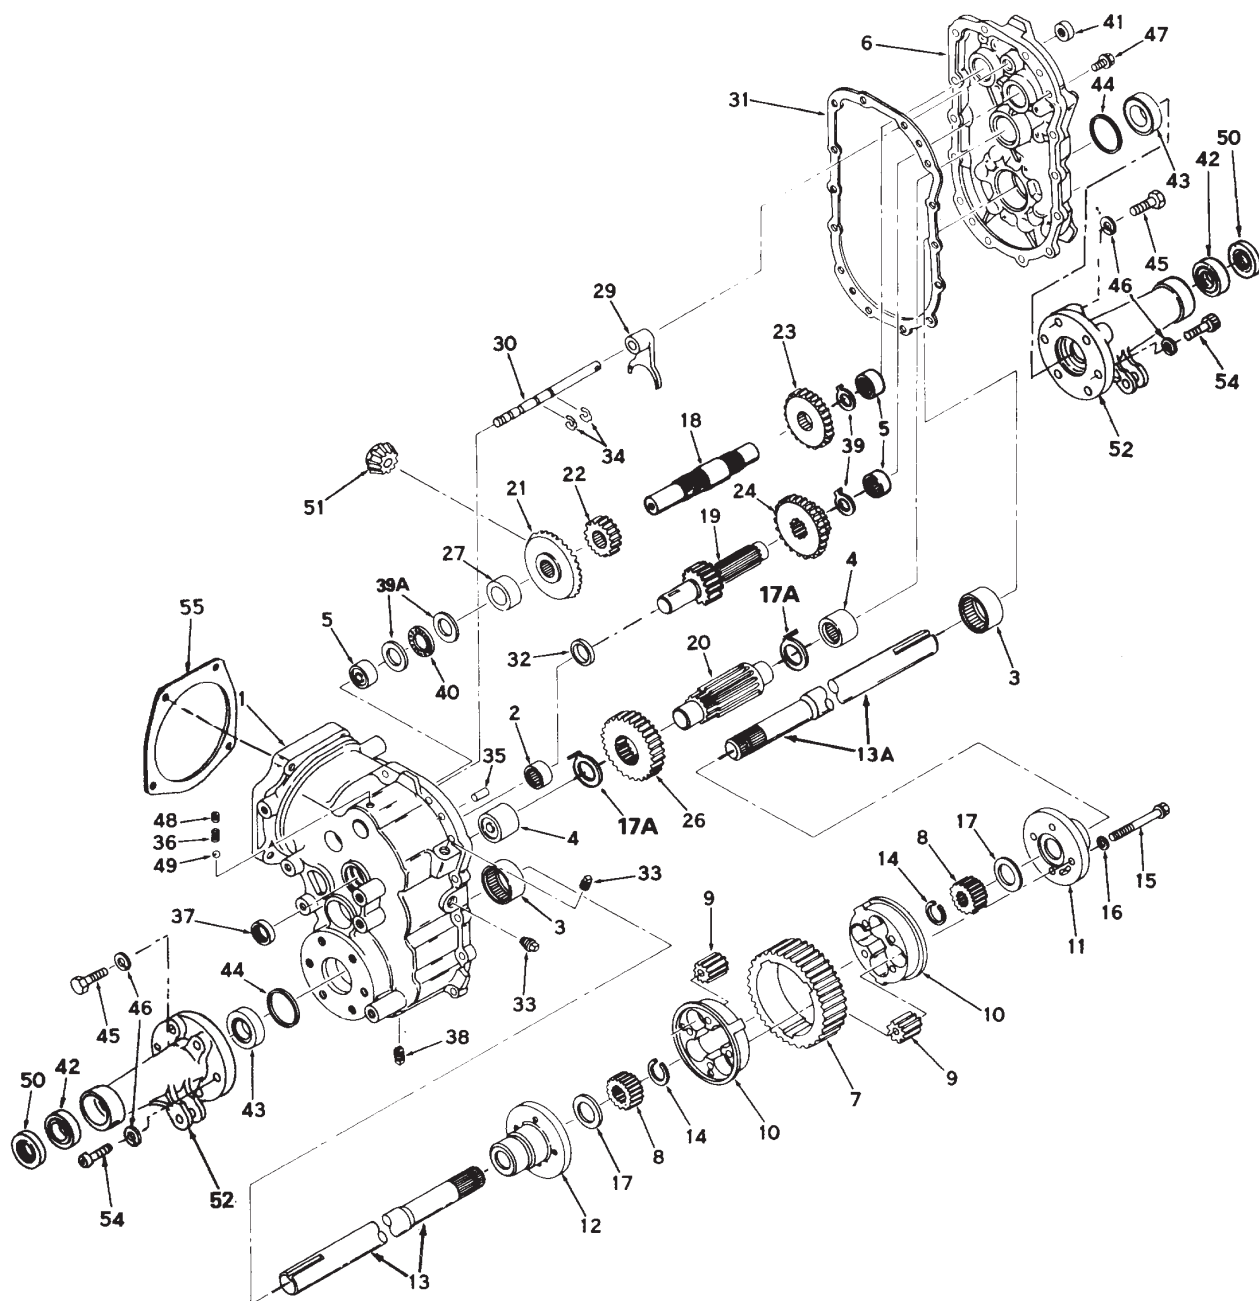


FRAME, DRIVE PARTS, AXLES

section 4

PARTS LIST for FIGURE 26

Ref	Part no.	Description	Quantity
Parts for all 425 tractors (Serial No. 1515 -)			
1	51-770060B	Transaxle Case (Incl. Ref. 2,3,4 & 5)	1
2	51-780097	Needle Bearing	1
3	51-780098	Needle Bearing	2
4	51-780099	Needle Bearing	2
5	51-780100	Needle Bearing	3
6	51-772065	Transaxle Cover (Incl. Ref 3,4,5)	1
7	51-778084	Ring Gear	1
8	51-778085	Side Gear	2
9	51-778086	Pinion Gear	8
10	51-786054	Core Body	2
11	51-774199	Differential Carrier	1
12	51-774200	Differential Carrier	1
13	51-774842	Left Axle, 22-1/8"	1
13A	51-774843	Right Axle, 21-1/4"	1
14	51-792062	Snap Ring	2
15	51-792063	Differential Bolt	4
16	99-G01	Lockwasher, 3/8 ID High	4
17	51-780101	Thrust Washer	2
17A	51-780156	Thrust Washer (tabbed)	2
18	51-776209	Counter Shaft	1
19	51-776122	Brake Shaft	1
20	51-776120A	Output Pinion	1
21	51-778087	Bevel Gear, 30 teeth	1
22	51-778088	Spur Gear, 16 teeth	1
23	51-778096	Spur Gear, 23 teeth	1
24	51-778097	Cluster Gear, 20 & 27 teeth	1
26	51-778098	Output Gear, 37 teeth	1
27	51-786094	Spacer	1
29	51-784195	Shifter Fork	1
30	51-784196A	Shifter Rod	1
31	51-788047	Gasket, Case & Cover (788047)	1
32	51-780005	Spacer	1
33	51-792010	Plug, Pipe	2
34	51-792064	Snap Ring	2
35	51-786026	Pin, Dowel	2
36	51-792003	Detent Spring	1
37	89-008	Oil Seal, Brake Shaft (788008)	1
38	51-792019	Magnetic Drain Plug	1
39	51-780157	Thrust Washer, Tabbed	2
39A	51-780045	Thrust Washer	2
40	51-780012	Thrust Bearing	1
41	89-007	Oil Seal, Shifter Shaft (788034)	1
42	51-780158	Bearing, Axle	4
43	51-780104	Thrust Bearing	2
44	51-021	O-Ring, Square Cut (788048)	2
45	90-0812	Screw, 1/2 x 1-1/2 Hex head (792065)	4
46	96-08	Lockwasher, 1/2 (792066)	8
47	51-792067	Screw, 5/16 x 1"	14
48	51-792068	Detent Set Screw, 1/4 x 1/2	1
49	51-792004	Detent Ball	1
50	51-788073	Seal, Axle	2
51	51-011	Bevel Pinion (778093A)	1
	04-002	Snap Ring	1
52	51-782070	Axle Housing, 11-7/32"	2
54	51-792069	Cap Screw, 1/2 x 1-1/2	4
55	21-005	Gasket, Motor	1


Front Transaxle
Figure 11
(Serial No. 1001 - 3049)

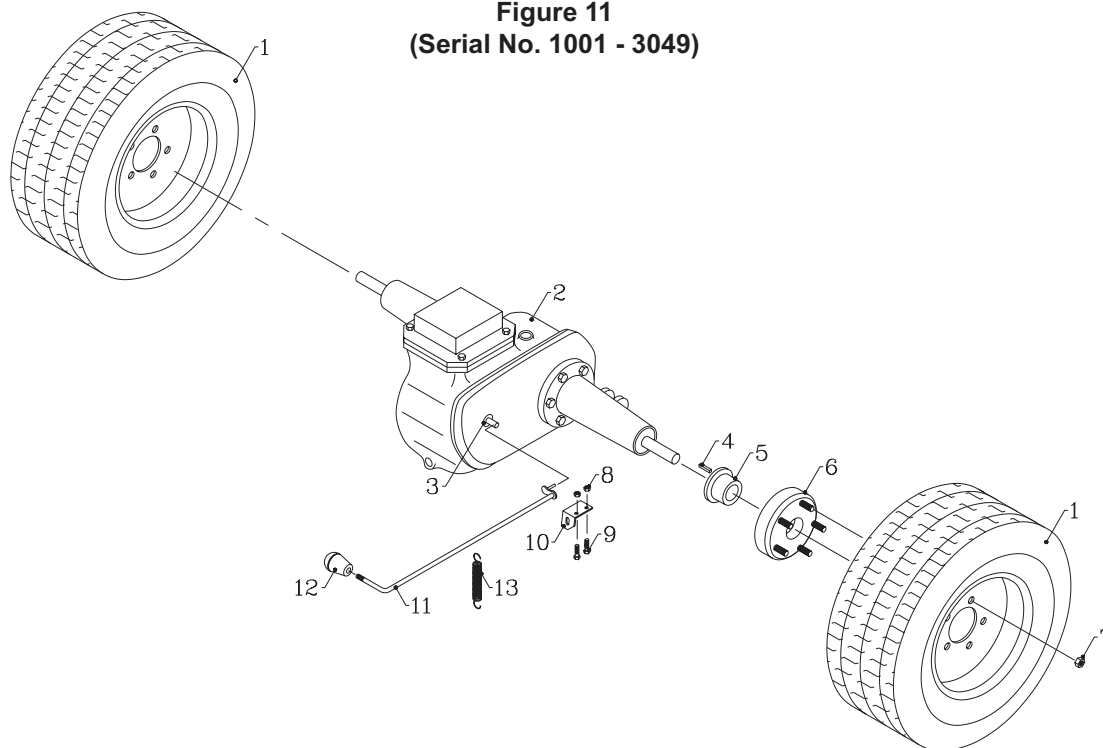

PARTS LIST for FIGURE 11


Ref	Part no.	Description	Quantity
1	53-078	Wheel Assembly, 24 x 13.00-12	2
	53-084	Tire Only, 24 x 13.00-12	2
	53-096	Optional Wheel Assembly, Right 23 x 10.50-12 (Bar Type)	1
	53-097	Optional Wheel Assembly, Left 23 x 10.50-12 (Bar Type)	1
2	51-027	Transaxle Assembly, Front Kubota (Serial No. 1001 - 1514)	1
	51-033	Transaxle Assembly, Front Kubota (Serial No. 1515 -)	1
	51-027	Transaxle Assembly, Front Onan (Serial No. 1001 - 1391)	1
	50-070	Transaxle Assembly, Front Onan (Serial No. 1392 - 1514)	1
	50-073	Transaxle Assembly, Front Onan (Serial No. 1515 - 2999)	1
	51-033	Transaxle Assembly, Front Onan (Serial No. 3000 -)	1
3	89-007	Seal, Shifter Shaft	1
4	85-K0410	Key	2
5	83-P120	Bushing	2
6	53-080	Hub, 5 Bolt	2
	91-0716	Bolt for Hub, 7/16 x 2 NF	5
7	99-E28	Wheel Nut, 7/16NF	10
8	99-E20	Flange Nut, 1/4	2
9	99-K26	Flange Bolt, 1/4 x 3/4	2
10	64-452	Bracket, Shifter	1
11	40-232	Lever, Shifter	1
12	47-001	Knob, Small	1
13	41-013	Spring, 1/2 x 2	1

Front Transaxle
Figure 11A
(Serial No. 3050 -)

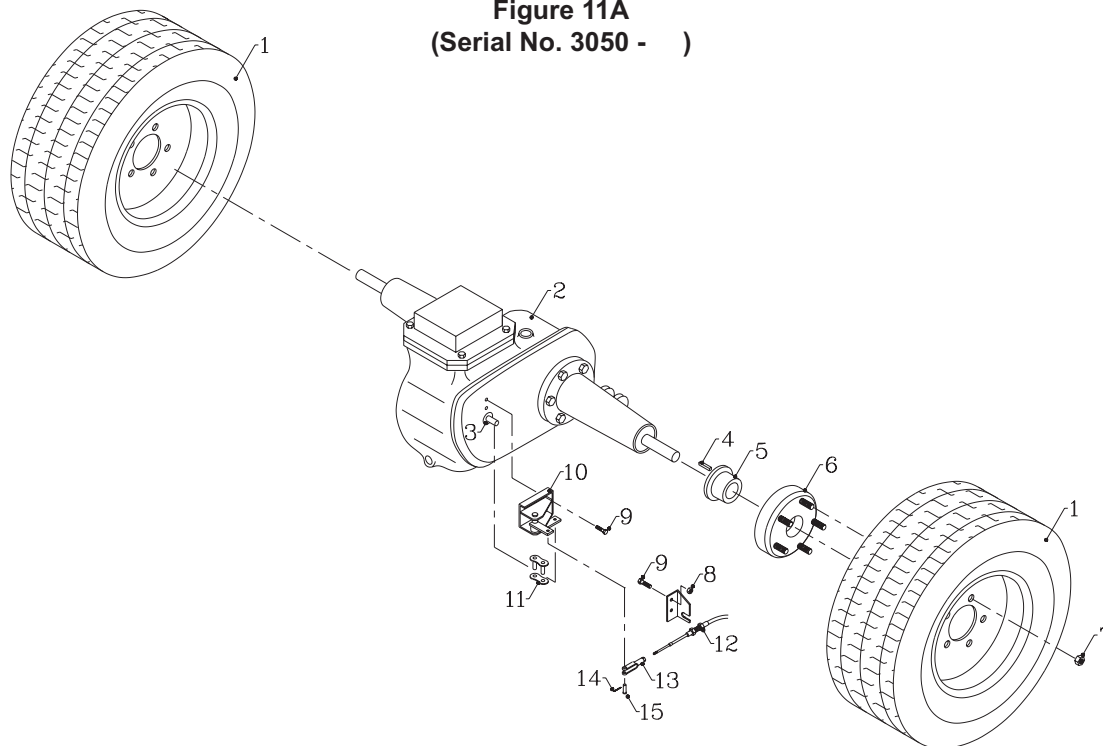

PARTS LIST for FIGURE 11A

Ref	Part no.	Description	Quantity
1	53-078	Wheel Assembly, w/24x1300x12 Ultra Trak	2
	53-084	Tire, 24x1300x12 Ultra Trak	2
	53-096	Optional Wheel, Right w/23x1050x12 Gdyr (Bar Type)	1
	53-097	Optional Wheel, Left w/23x1050x12 Gdyr (Bar Type)	1
2	51-033	Transaxle, 2562 W/1-1/4 Axles	1
3	89-007	Seal, Shift Rod Peerless Axles	1
4	85-K0410	Key, Square 1/4 X 1/4 X 1-1/4	2
5	83-P120	Bushing, 1-1/4" P1	2
6	53-080	Hub, 5-bolt 7/16"holes	2
	91-0716	Bolt, 7/16-20 X 2 NF	5
7	99-E28	Nut, Wheel 7/16-20 NF	10
8	99-E20	Flange Nut, 1/4-20	2
9	99-K26	Bolt, Flange 1/4-20 X 3/4	4
10	40-310	Parts, Front Shifter Bracket	1
11	81-024	Connector Link, #60	1
12	47-083	Cable, Control Shifter	1
13	43-Y0304F	Yoke End, 10-32 Thread X 1/4 Pin	1
14	02-CP0306	Cotter Pin, 3/32 X 3/4	1
15	03-0406	Clevis Pin, 1/4 X 3/4	1

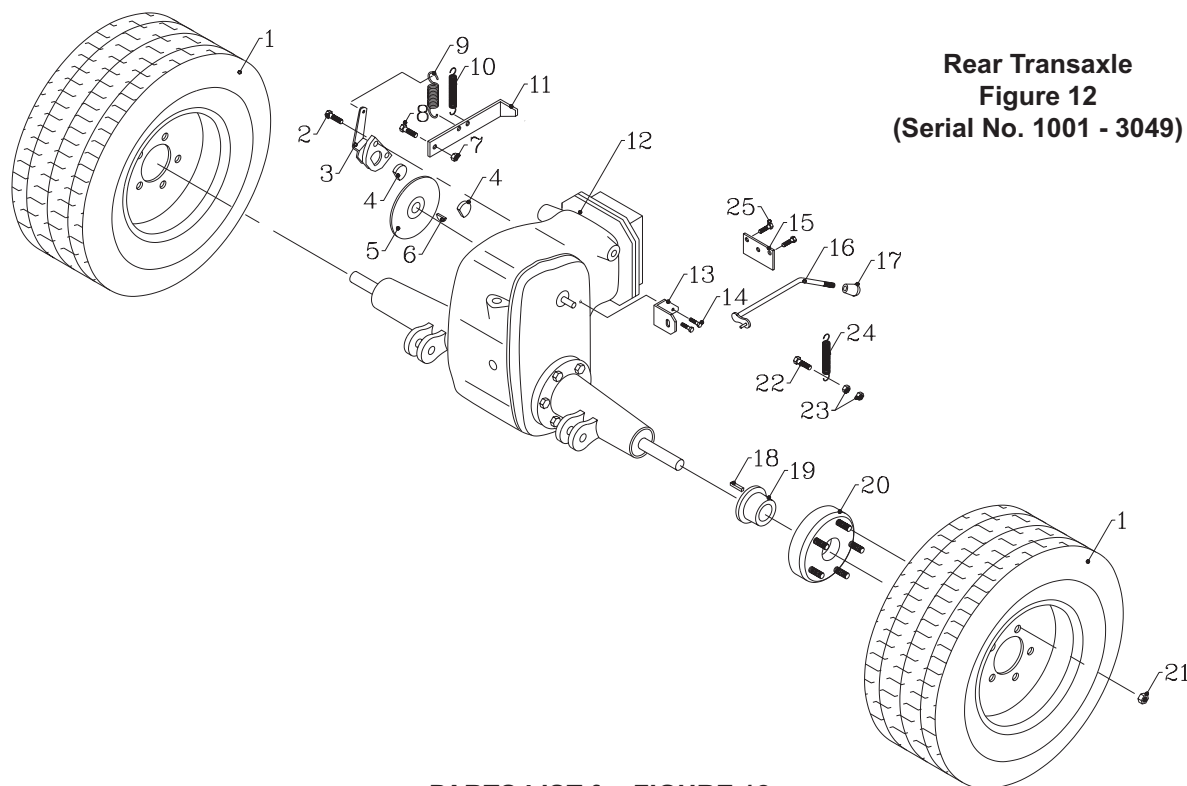


Rear Transaxle
Figure 12
(Serial No. 1001 - 3049)

PARTS LIST for FIGURE 12


Ref	Part no.	Description	Quantity
1	53-078	Wheel Assembly, 24 x 13.00-12	2
	53-084	Tire Only, 24 x 13.00-12	2
	53-096	Optional Wheel Assembly, Right 23 x 10.50-12 (Bar Type)	1
	53-097	Optional Wheel Assembly, Left 23 x 10.50-12 (Bar Type)	1
2	90-0612	Bolt, 3/8 x 1-1/2	2
3	53-022	Brake Assembly, Complete	1
4	53-021	Brake Puck, Set of 2	1
5	53-020	Disc, Brake	1
6	85-W0306	Woodruff Key	1
7	99-A05	Nut, 5/16	1
8	90-0508	Bolt, 5/16 x 1	1
9	41-048	Spring	1
10	41-010	Spring, 3/4 x 5	1
11	40-231	Lever, Parking Brake	1
12	51-027	Transaxle, Rear (Serial No. 1001 - 1514)	1
	51-033	Transaxle, Rear (Serial No. 1515 - 2999)	1
	50-084	Transaxle, Rear (Serial No. 3000 -)	1
13	64-176	Bracket, Shifter	1
14	90-0406	Bolt, 1/4 x 3/4	2
15	60-434	Cover, Shifter	1
	00-103	Decal, Transaxle 2-1 Symbol	1
16	40-240	Lever, Rear Shifter	1
17	47-001	Knob, Small	1
18	85-K0410	Key	2
19	83-P120	Bushing	2
20	53-080	Hub, 5 bolt	2
	91-0716	Bolt for Hub, 7/16 x 2 NF	5
21	99-E28	Wheel Nut, 7/16 NF	10
22	90-0516	Bolt, 5/16 x 2	1
23	99-E13	Flange Nut, 3/8	2
24	41-020	Spring, 3/4 x 4	1
25	99-K26	Flange Bolt, 1/4 x 3/4	2

Rear Transaxle
Figure 12A
(Serial No. 3050 -)

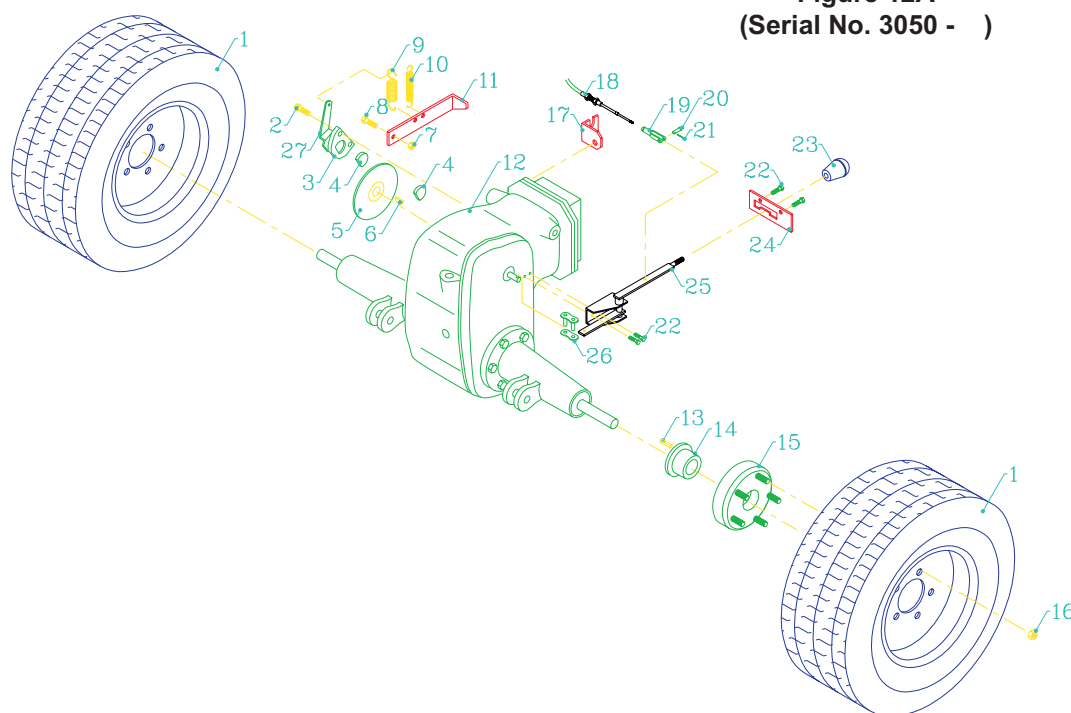

PARTS LIST for FIGURE 12A

Ref	Part no.	Description	Quantity
1	53-078	Wheel Assembly, w/24 x13.00 x12 Ultra Trak	2
	53-084	Tire, 24 x1300 x12 Ultra Trac	2
	53-096	Optional Wheel, Right w/23 x 10.50 x 12 Gdyr (Bar Type)	1
	53-097	Optional Wheel, Left w/23 x10.50 x 12 Gdyr (Bar Type)	1
2	90-0612	Bolt, 3/8-16 X 1-1/2	2
3	53-022	Brake, Caliper Complete	1
4	53-021	Brake Puck, Set of 2	1
5	53-020	Disc, Parking Brake W/1" Hub	1
6	85-W0306	Key, Woodruff 3/16 X 3/4	1
7	99-A05	Locknut, Stover 5/16-18	1
8	90-0508	Bolt, 5/16 X 1	1
9	41-048	Spring, ext 1.0 X 4.156	1
10	41-010	Spring, ext. 0.765 X 4.813	1
11	40-231	Lever, Parking Brake	1
12	50-084	Transaxle, 425 Rear with vent	1
13	85-K0410	Key, Square 1/4 X 1/4 X 1-1/4	2
14	83-P120	Bushing, 1-1/4" P1	2
15	53-080	Hub, 5-bolt 7/16"holes	2
	91-0716	Bolt, 7/16-20 X 2 NF	5
16	99-E28	Nut, Wheel 7/16-20 NF	10
17	64-779	Rear Cable Mount	1
18	47-083	Cable, Control Shifter	1
19	43-Y0304F	Yoke End, 10-32 Thread X 1/4 Pin	1
20	03-0406	Clevis Pin, 1/4 X 3/4	1
21	02-CP0306	Cotter Pin, 3/32 X 3/4	1
22	99-K26	Bolt, Flange 1/4-20 X 3/4	4
23	47-001	Knob, Small #80	1
24	60-598	Single Lever Shifter Cover Plate	1
	00-103	Decal, Transaxle 1-2 Symbol	1
25	40-311	Lever, Shifter	1
26	81-024	Connector Link, #60	1
27	53-113	Brake Lever	1

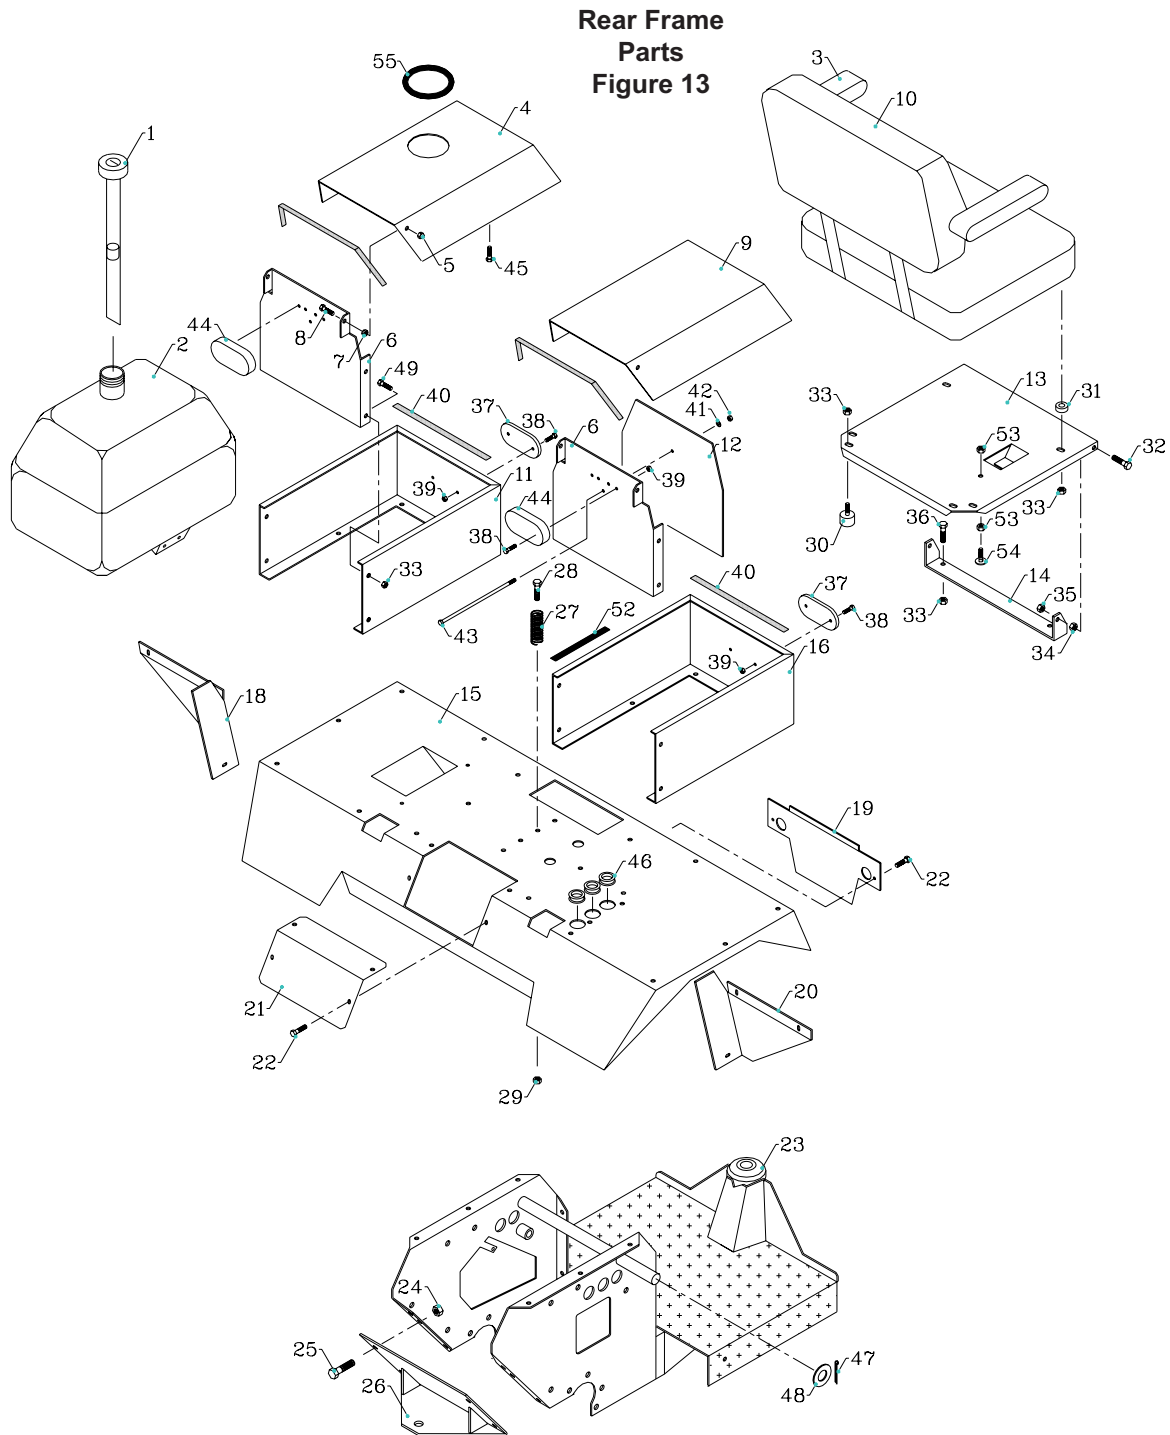

PARTS LIST for FIGURE 13

Ref	Part no.	Description	Quantity
1	35-062	Fuel Gauge	1
2	06-024	Fuel Tank	1
3	47-057	Arm Rest, Left	1
	47-056	Arm Rest, Right	1


FRAME, DRIVE PARTS, AXLES

section 4

PARTS LIST for FIGURE 13 (continued)

Ref	Part no.	Description	Quantity
4	60-417	Fender Lid, Left	1
	56-027-19	Trim-loc Trim for 60-417	1
5	99-E16	Acorn Nut, 5/16	4
6	64-432	Fender Panel, Rear	2
7	92-05	Nut, 5/16	4
8	90-0510	Bolt, 5/16 x 1-1/4	4
9	60-416	Fender Lid, Right	1
	56-027-19	Trim-loc Trim for 60-416	1
	00-105	Decal, Horn Instructions (Serial No. 1001 - 2999)	1
10	47-042	Deluxe Seat without arm rests	1
	75-70424	Grammar Seat (Optional)	1
11	60-415	Fender Panel, Left	1
12	60-425	Battery Panel	1
13	60-432	Seat Plate	1
	60-573	Seat Plate for 75-70424 Optional Seat	1
14	64-433	Bracket, Seat Hinge	1
15	62-606	Cover, Rear Frame	1
16	60-414	Fender Panel, Right	1
17	00-180	Decal, 4 x 4	2
18	60-427	Tire Cover, Left	1
19	60-422	Cover, Rear Motor	1
	00-093	Decal, Read Owner's Manual	1
20	60-428	Tire Cover, Right	1
21	60-413	Hitch Cover Plate	1
22	99-C0506	Bolt, 5/16 x 3/4 Self Tap (Serial No. 1001 - 2999)	6
	99-K26	Flange Bolt, 1/4 x 3/4 (Serial No. 3000 -)	6
23	62-612	Rear Frame Assembly	1
24	92-08	Nut, 1/2	4
25	90-0808	Bolt, 1/2 x 1	4
26	62-608	Rear Hitch	1
27	41-049	Spring	1
28	99-K13	Flange Bolt, 3/8 x 1	1
29	99-E13	Flange Nut, 3/8	1
30	05-019	Seat Bumper	2
31	06-037	Spacer, Seat	4
32	90-0610	Bolt, 3/8 x 1-1/4	2
33	99-E12	Flange Nut, 5/16	16
34	92-06	Nut, 3/8	2
35	99-A06	Locknut, 3/8	2
36	99-K19	Flange Bolt, 5/16 x 3/4	2
37	33-012	Reflector, Amber	2
38	01-002	Screw, #8-32 x 1/2	8
39	01-004	Nut, #8-32	8
40	56-027-11	Trim-loc, 11"	2
41	99-G06	Washer, Shake proof, 1/4	1
42	92-04	Nut, 1/4	1
43	90-0460	Bolt, 1/4 x 7-1/2	1
44	33-008	Tail Light, Red	2
45	99-K26	Flange Bolt, 1/4 x 3/4	4
46	05-033	Grommet	3
47	02-CP0510	Cotter Pin, 5/32 x 1-1/4	1
48	99-B13	Machinery Washer, 1"	1
49	99-K14	Bolt, Round Head Slotted, 5/16 x 1/2	8
50	29-010	Grease Fitting	1
51	05-032	Grommet	5
52	56-027-06	Trim-loc, 6"	1
53	99-E20	Flange Nut, 1/4 (Serial No. 3000 -)	2
54	99-K03	Special Bolt (Serial No. 3000 -)	1
55	56-027-14	Trim-loc, 14"	1

Front Lift and
Frame Parts
Figure 14

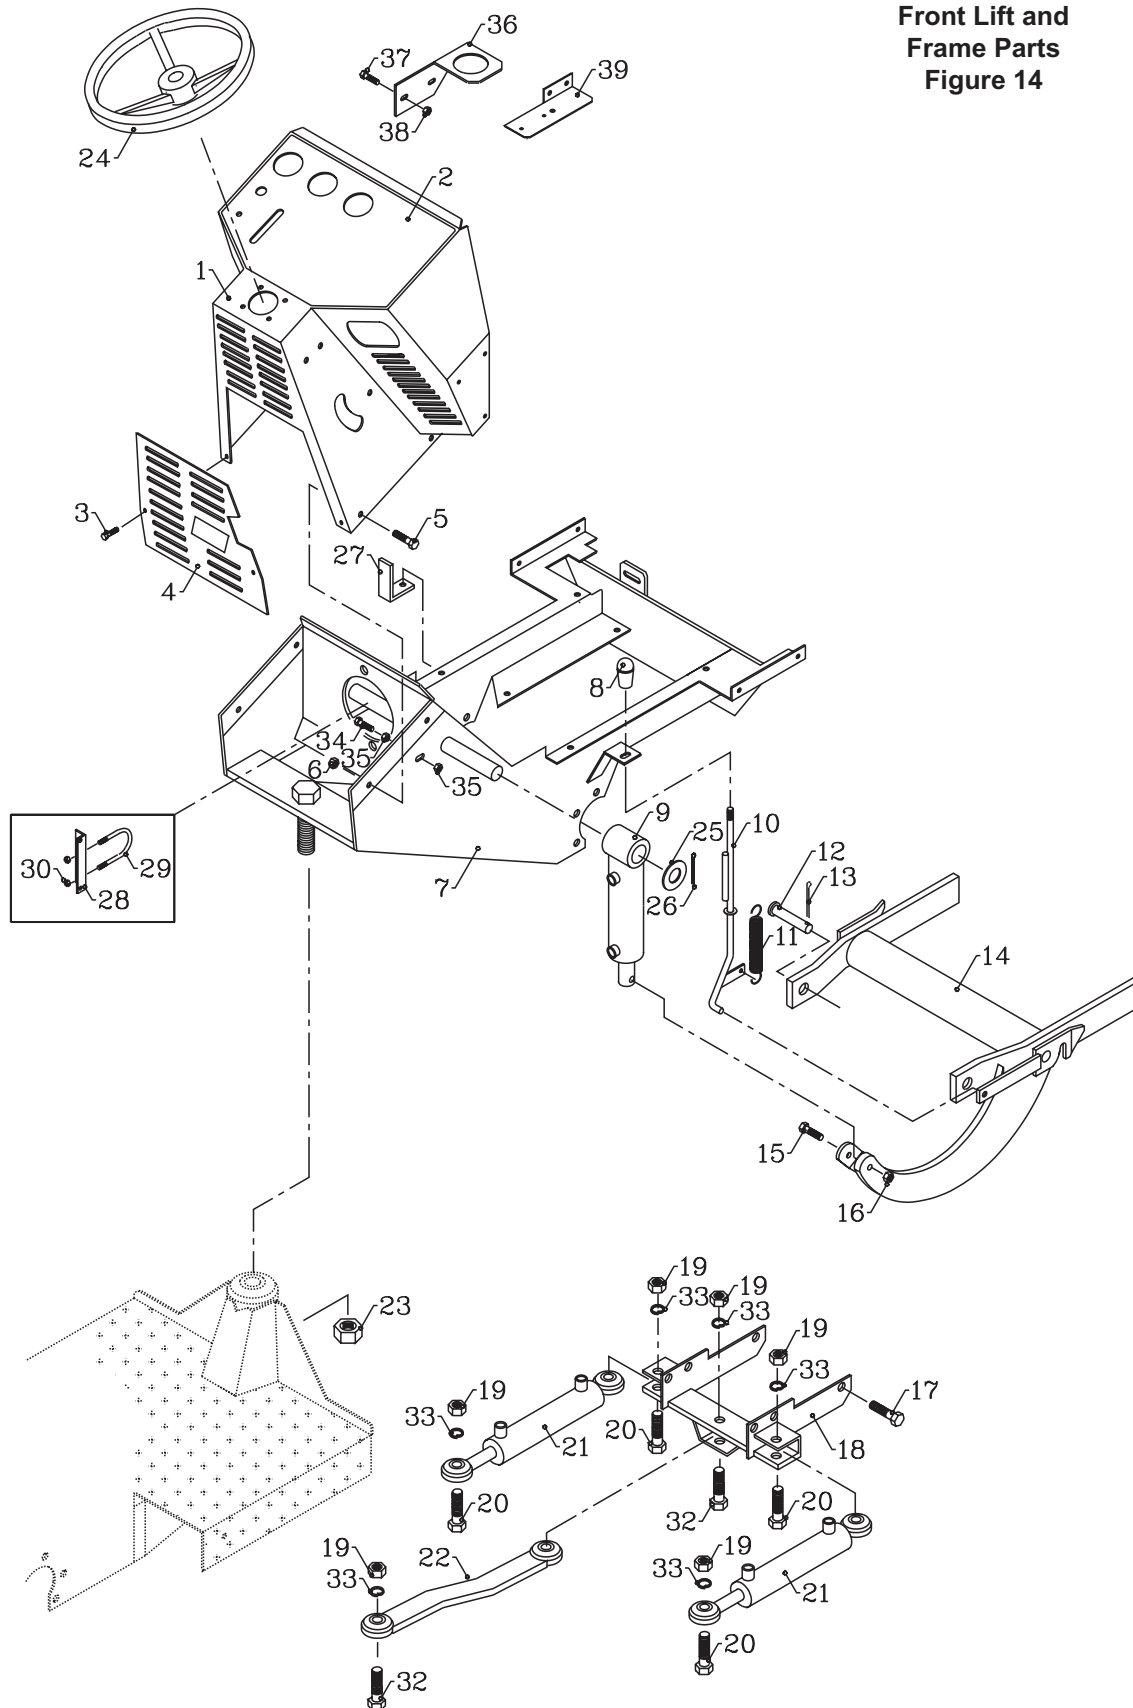

FRAME, DRIVE PARTS, AXLES

section 4

PARTS LIST for FIGURE 14

Ref	Part no.	Description	Quantity
1	62-611	Dash Assembly (Serial No. 1001 - 1224)	1
	62-639	Dash Assembly (Serial No. 1225 - 1641)	1
	62-713	Dash Assembly, Kubota (Serial No. 1642 -)	1
	62-715	Dash Assembly, Onan (Serial No. 1642 -)	1
2	00-186	Dash Decal	1
3	99-C0406	Bolt, 1/4 x 3/4 Self Tap (Serial No. 1001 - 1224)	2
	99-K26	Flange Bolt, 1/4 x 3/4 (Serial No. 1225 -)	2
4	60-412	Panel, Lower Column (Serial No. 1001 - 1224)	1
	60-493	Panel, Lower Column (Serial No. 1225 -)	1
	00-073	Decal, 1 - 2 Symbol	1
5	99-K11	Flange Bolt, 3/8 x 3/4	4
6	99-E13	Flange Nut, 3/8	4
7	62-613	Front Frame Assembly (Serial No. 1001 - 1224)	1
	62-640	Front Frame Assembly (Serial No. 1225 - 1641)	1
	62-714	Front Frame Assembly (Serial No. 1642 -)	1
8	47-001	Knob, Small	1
9	23-005	Lift Cylinder	1
10	40-234	Lever, Front Lift Release	1
11	41-047	Spring	1
12	03-1022	Clevis Pin, 5/8 x 2-3/4	2
13	02-CP0510	Cotter Pin	2
14	62-605	Front Lift Assembly	1
15	90-0618	Bolt, 3/8 x 2-1/4	1
16	99-A06	Locknut, 3/8	1
17	90-0810	Bolt, 1/2 x 1-1/4	6
18	62-614	Frame, Lower Front (Serial No. 1001 - 2999)	1
	62-764	Frame, Lower Front (Serial No. 3000 -)	1
19	99-A10NF	Locknut, 5/8 NF (Serial No. 1001 - 2999)	6
	93-10	Nut, 5/8 NF (Serial No. 3000 -)	6
20	91-1016	Bolt, 5/8 x 2 NF (Serial No. 1001 - 2999)	4
	91-1018	Bolt, 5/8 x 2-1/4 NF (Serial No. 3000 -)	4
21	23-053	Steering Cylinder	2
22	62-607	Link, Center Pivot (Serial No. 1001 - 2999)	1
	42-468	Link, Center Pivot (Serial No. 3000 -)	1
23	99-E04	Locknut, 1" NF	1
24	47-019	Steering Wheel (Serial No. 1001 - 3049)	1
	47-082	Steering Wheel, with center (Serial No. 3050 -)	1
	47-082A	Cap, Center for 47-082	1
	47-103	Steering Wheel with center (Serial No. 3050 -)	1
	47-104	Cap, Center for 47-103	1
25	99-B13	Machinery Washer, 1"	1
26	02-CP0510	Cotter Pin, 5/32 x 1-1/4	1
27	64-442	Hose Guide, Steering	1
28	64-472	Hose Bracket, High Pressure (Serial No. 1001 - 2999)	1
29	99-K24	U-Bolt, 1/4 (Serial No. 1001 - 2999)	1
30	99-A04	Locknut (Serial No. 1001 - 2999)	2
31	00-060	Decal, Fill with Steiner/TRC Oil	1
32	91-1016	Bolt, 5/8 x 2 NF (Serial No. 1001 - 2999)	2
	91-1020	Bolt, 5/8 x 2-1/2 NF (Serial No. 3000 -)	2
33	96-10	Lock Washer, 5/8 (Serial No. 3000 -)	6
34	90-0508	Bolt, 5/16 x 1 (Serial No. 3000 -)	1
35	99-E12	Flange Nut, 5/16 (Serial No. 3000 -)	2
36	64-754	Hour Meter Bracket, Kubota Only (Serial No. 3000 -)	1
37	99-K27	Flange Bolt, 1/4 x 1, Kubota Only (Serial No. 3000 -)	2
38	99-E20	Flange Nut, 1/4, Kubota Only (Serial No. 3000 -)	2
39	64-466	Bracket, Alarm and Timer, Onan (Serial No. 1001 - 2999)	1
	64-466	Bracket, Alarm and Timer, Kubota (Serial No. 1001 -)	1


FRAME, DRIVE PARTS, AXLES

section 4

PARTS LIST for FIGURE 15 (Serial No. 1001 - 1641)

Ref	Part no.	Description	Quantity
1	47-038	Knob	1
2	40-237	PTO Lever	1
3	42-390	PTO Spring Rod	1
4	41-030	Spring	1
5	41-020	Spring	1
6	42-388	Notched Plate, Belt Adjust	1
7	47-001	Knob, Small	1
8	40-241	Lever, Belt Tension Adjustment	1
9	90-0616	Bolt, 3/8 x 2	1
10	42-389	Link, Tension Adjuster	1
11	43-006A	Rod End	2
12	92-06	Nut, 3/8	3
13	41-050	Spring	1
14	94-06	Flat Washer, 3/8	6
15	99-A06	Locknut, 3/8	2
16	64-440	Spacer	1
17	64-444	Bracket, Tightener Alignment	1
18	90-0616	Bolt, 3/8 x 2	1
19	40-233	Idler Arm, PTO	1
20	90-0608	Bolt, 3/8 x 1	2
21	64-439	Bushing, PTO Pivot	1
22	40-238	Idler Arm, Double Pulley (Serial No. 1001- 1164) Substitute 40-267 and 64-568	1
	40-267	Idler Arm, Double Pulley (Serial No. 1165 - 1641)	1
23	41-052	Spring	1
24	64-443	Washer, Special	1
25	90-0620	Bolt, 3/8 x 2-1/2	1
26	60-430	Shield, Front Pulley	1
27	90-0522	Bolt, 5/16 x 2-3/4	1
28	90-0828	Bolt, 1/2 x 3-1/2	1
29	83-026	Idler, Double	1
	55-6204	Replacement Bearing	2
30	99-E12	Flange Nut, 5/16	3
31	92-08	Nut, 1/2	1
32	83-028	Flat Idler	1
33	64-457	Cam Stop	1
34	81-B042	PTO Drive Belt	1
35	81-B041	Attachment Drive Belt	1
36	64-568	Belt Guide	1
37	95-08	Flat Washer, 1/2 SAE	2
38	94-08	Flat Washer, 1/2	2
39	97-0516	Carriage Bolt, 5/16 x 2	1
40	96-08	Lock Washer, 1/2"	1
41	64-570	Spacer	1

PTO Drive Parts
Figure 15A
(Serial No. 1642 -)

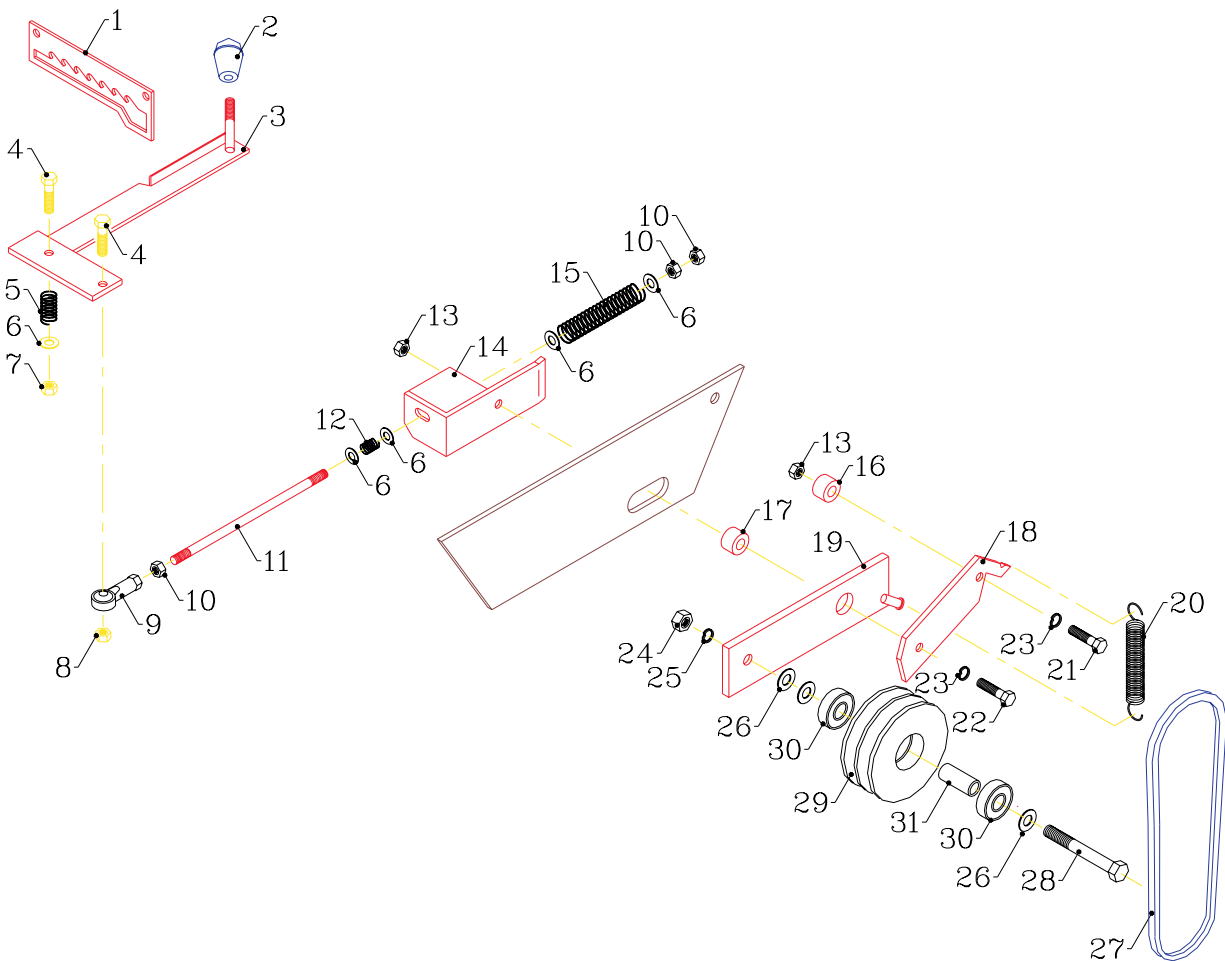


FRAME, DRIVE PARTS, AXLES

section 4

PARTS LIST for FIGURE 15A (Serial No. 1642 -)


Ref	Part no.	Description	Quantity
1	42-388	Notched Plate, Belt Adjust (Serial No. 1642 - 2999)	1
	42-469	Notched Plate, Belt Adjust (Serial No. 3000 -)	1
2	47-001	Knob, Small	1
3	40-241	Lever, Belt Tension Adjustment	1
4	90-0616	Bolt, 3/8 X 2	2
5	41-050	Spring, Compression 7/16 x 1	1
6	94-06	Flat Washer, 3/8	5
7	99-A06	Locknut, 3/8	1
8	92-06	Nut, 3/8	1
9	43-006A	Rod End, Spherical 3/8	1
10	93-06	Nut, 3/8 NF	3
11	42-439	Link Rod	1
12	41-039	Spring, Compression 3/8 x 5/8	1
13	99-E13	Flange Nut, 3/8	2
14	64-633	Draw Link	1
15	41-058	Spring, Compression 1 x 4	1
16	64-440	Spacer	1
17	64-439	Bushing, PTO Pivot	1
18	42-438	Anchor, Idler Spring	1
19	40-288	Idler Lever	1
20	41-020	Spring, Extension 3/4 x 4	1
21	90-0612	Bolt, 3/8 X 1-1/2	1
22	90-0614	Bolt, 3/8 X 1-3/4	1
23	96-06	Lock Washer, 3/8	2
24	92-08	Nut, 1/2	1
25	96-08	Lock Washer, 1/2	1
26	95-08	Flat Washer, 1/2 SAE	3
27	81-B041	Belt, B41	1
28	90-0828	Bolt, 1/2 x 3-1/2	1
29	83-026	Pulley, 2 Groove Idler (Serial No. 1642 - 2999)	1
	83-038	Pulley, 2 Groove Idler (Ser. No. 3000 -)(Incl. Ref. 30,31)	1
30	55-6204	Bearing	2
31	83-039	Bearing Spacer (Serial No. 3000 -)	1

Hood and
Grille Parts
Figure 16

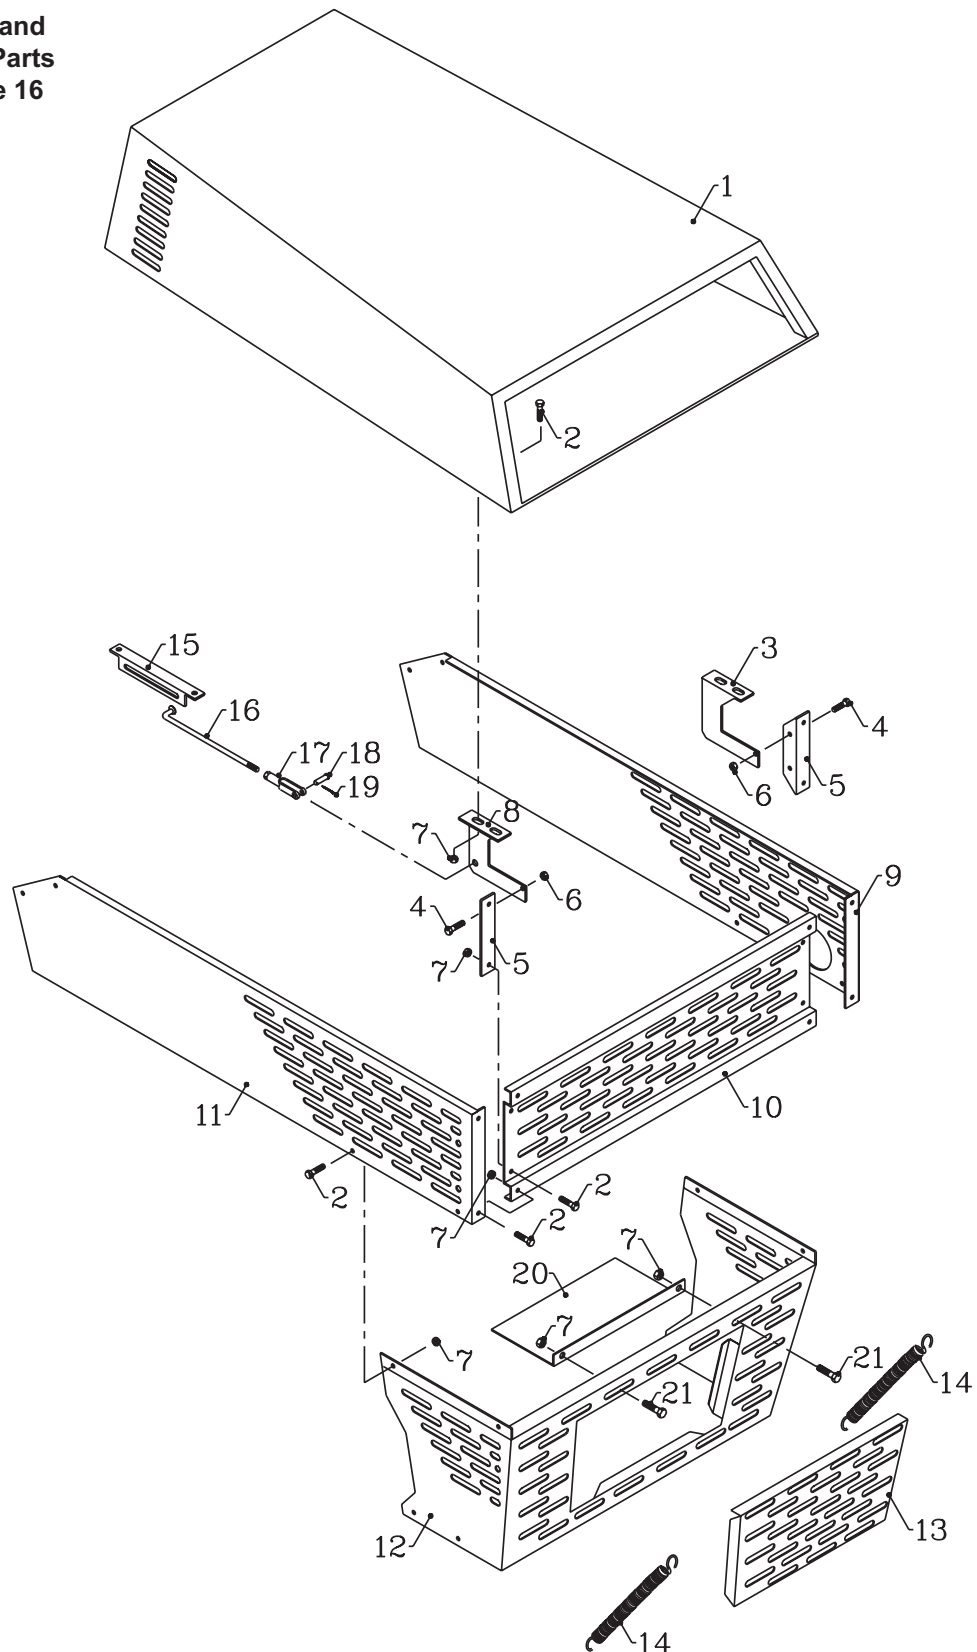

PARTS LIST for FIGURE 16

Ref	Part no.	Description	Quantity
1	60-421	Hood	1
	56-027-30	Trim-loc Trim, 30"	1
	56-003-16	Weatherstrip, 16"	1
2	99-K26	Flange Bolt, 1/4 x 3/4	22
3	64-435	Hinge, Hood Left	1
4	90-0506	Bolt, 5/16 X 3/4	2
5	64-449	Bracket, Hood Hinge	2
6	99-A05	Locknut, 5/16	2
7	99-E20	Flange Nut, 1/4	24
8	64-436	Hood Hinge, Right	1
9	60-431	Hood Panel, Left	1
	00-059	Decal, Steiner Die Cut	1
10	60-419	Grille Panel, Top (Serial No. 1001 - 1641)	1
	60-533	Grille Panel, Top (Serial No. 1642 -)	1
11	60-420	Hood Panel, Right	1
	00-059	Decal, Steiner Die Cut	1
12	60-418	Grille (Serial No. 1001 - 1641)	1
	60-530	Grille (Serial No. 1642 -)	1
	00-096	Decal, 425	2
13	60-531	Access Cover (Serial No. 1642 - 3097)	1
	60-620	Access Cover, outboard bearing (Serial No. 3098 -)	1
14	41-059	Spring, Extension .307 x 7" (Serial No. 1642 -)	2
15	64-675	Hood Support Slide	2
16	42-453	Hood Support Link	2
17	43-Y0404F	Yoke	2
18	03-0406	Clevis Pin, 1/4 x 3/4	2
19	02-CP0204	Cotter Pin, 1/16 x 1/2	2
20	60-607	Heat Shield (Serial No. 3080 -)	1
21	99-K31	Flange Bolt, 1/4 x 1/2	2

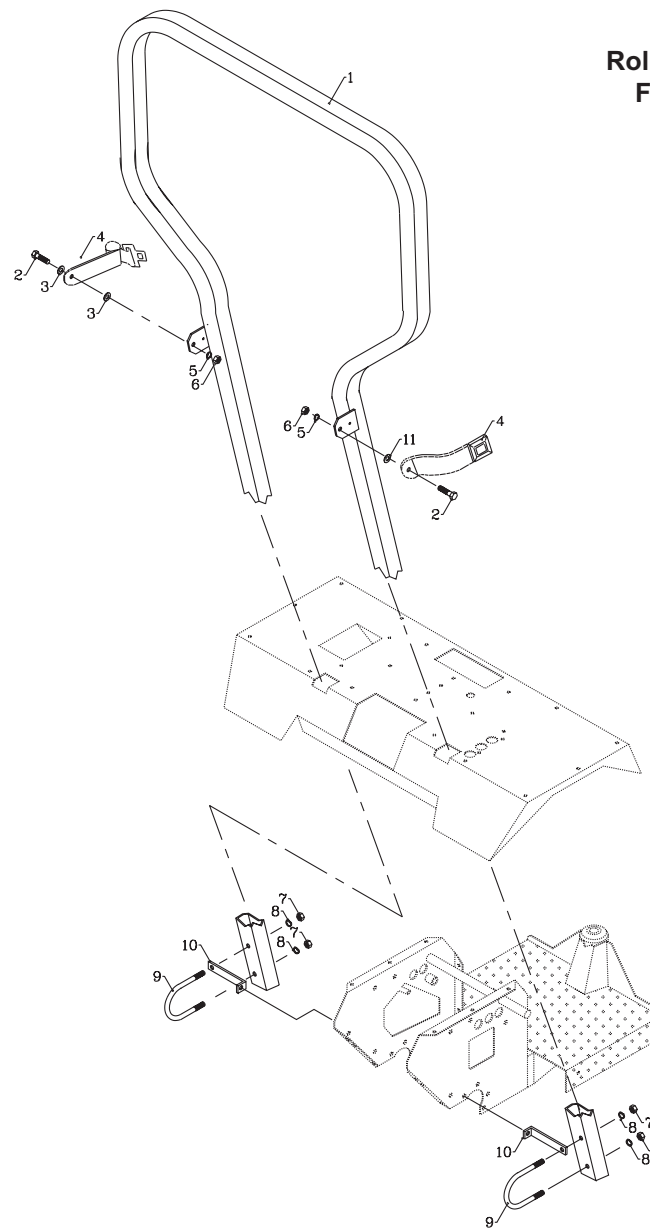


**Roll Bar Parts
Figure 18**

Parts List for Figure 18

Ref	Part No	Description	Quantity
1	62-635	Roll Bar Assembly (Not Available as a Service Part)	1
2	90-0710	Bolt, 7/16 x 1-1/4	2
3	94-07	Flat Washer, 7/16	2
4	47-059	Seat Belt Set	1
5	96-07	Lock Washer, 7/16	2
6	92-07	Nut, 7/16	2
7	92-08	Nut, 1/2	4
8	96-08	Lock Washer, 1/2	4
9	99-K34	U Bolt	2
10	64-494	Support Bracket	2
11	99-B12	Spacer	1


Rear Weight Bar
Attachment
Figure 17

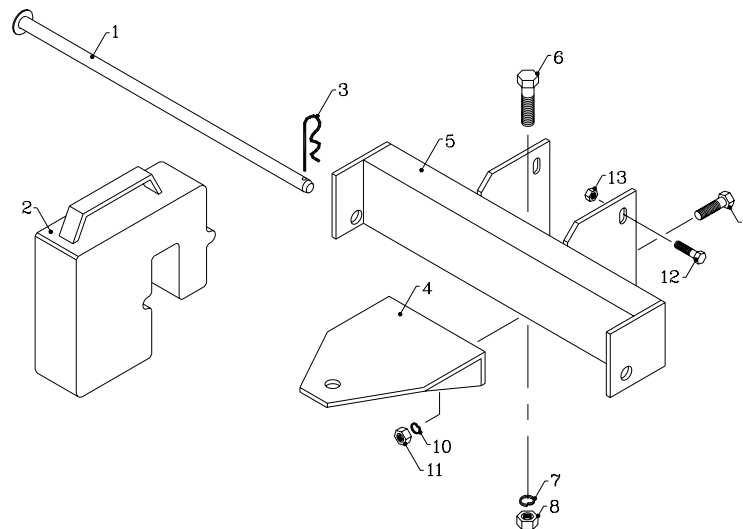

Parts List for Figure 17

Ref	Part no.	Description	Quantity
1	42-467	Weight Security Rod	1
2	62-540	Weight 55#	4
3	02-PP0524	Presto Pin, 5/32	1
4	62-542	Drawbar Hitch Extension	1
5	62-541	Tractor Weight Bar	1
6	64-474	Mounting Bracket (425 only)	1
7	64-473	Drawbar Attaching Plate (425 only)	1
8	90-1012	Bolt, 5/8 x 1-1/2	2
9	96-10	Lock Washer, 5/8	2
10	92-10	Nut, 5/8	2
11	90-0810	Bolt, 1/2 x 1-1/4	4
12	96-08	Lock Washer, 1/2	4
13	92-08	Nut, 1/2	4
14	90-0608	Bolt, 3/8 x 1	2
15	99-E13	Flange Nut, 3/8	2


Front Weight Bar
Attachment
Figure 25

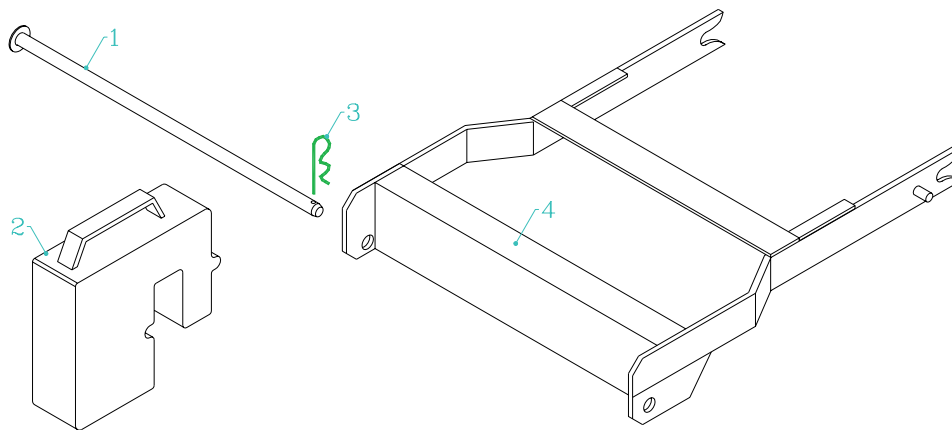

Parts List for Figure 25

Ref	Part no.	Description	Quantity
1	42-416	Security Rod	1
2	62-540	Weight 55#	4
3	02-PP0524	Presto Pin	1
4	62-665	Frame, Front Weight Hitch	1


3-Point Hitch
Parts
Figure 20

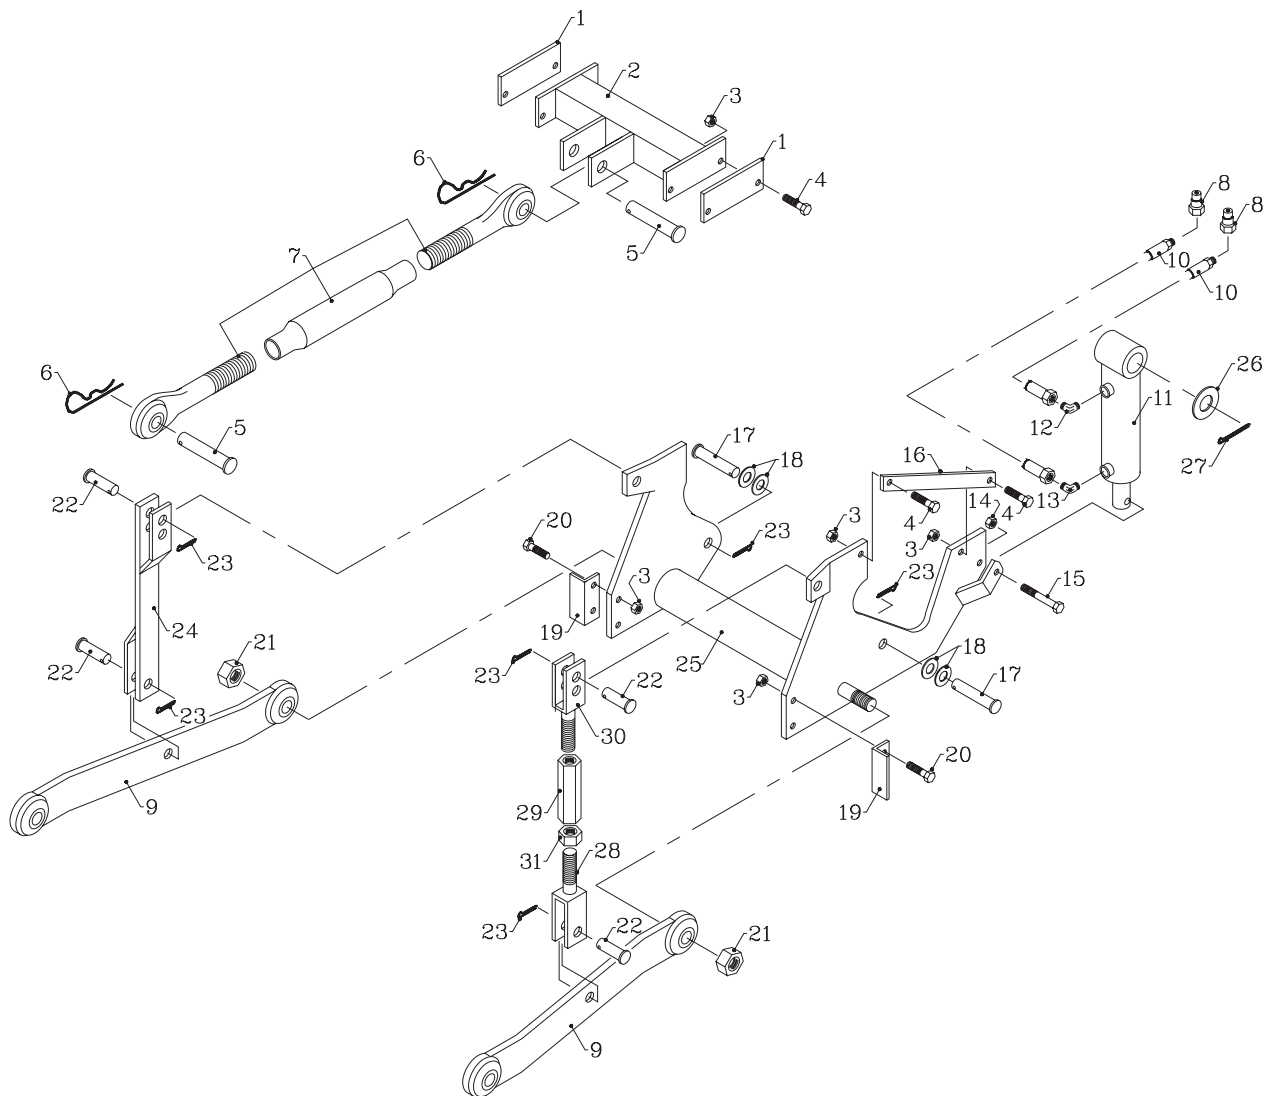

Parts List for Figure 20

Ref	Part no.	Description	Quantity
1	64-524	Spacer	2
2	62-644	Mount, Top Link	1
3	99-E13	Flange Nut, 3/8	10
4	99-K22	Flange Bolt, 3/8 X 1-1/4	6
5	03-1224	Clevis Pin, 3/4 x 3	2
6	02-PP0524	Presto Pin, 5/32 x 2-15/16	2
7	42-410	Top Link	1
8	23-004	Quick Coupler, Male	2
9	62-645	Draft Link	2
10	20-071	Hose, 1/4 x 60	2
11	23-005	Lift Cylinder	1
	21-13909X	Seal Kit, Lift Cylinder	1
12	25-3103-6-6	Fitting, 45 Degree	1
13	25-2103-6-6	Fitting	1
14	99-A06	Locknut, 3/8	1
15	90-0616	Bolt, 3/8 X 2	1
16	64-523	Brace	1
17	03-1022	Clevis Pin, 5/8 x 2-3/4	2
18	94-10	Flat Washer, 5/8	4
19	64-525	Sway Bumper	2
20	99-K13	Flange Bolt, 3/8 X 1	4
21	99-A14NF	Locknut, 7/8 NF	2
22	03-1012	Clevis Pin, 5/8 x 1-1/2	4
23	02-CP0510	Cotter Pin, 5/32 x 1-1/4	6
24	42-411	Lift Link	1
25	62-643	Main Frame, 3-Point	1
26	99-B13	Flat Washer, 1" x 14 ga.	1
27	02-CP0512	Cotter Pin, 5/32 x 1-1/2	1
28	42-436	Adjustable Lift Link, Bottom	1
29	99-F38	Adjustment Nut	1
30	42-437	Adjustable Lift Link, Top	1
31	99-E30	Jam Nut, 3/4 NC	1

**Optional Selector
Valve Parts
Figure 21**

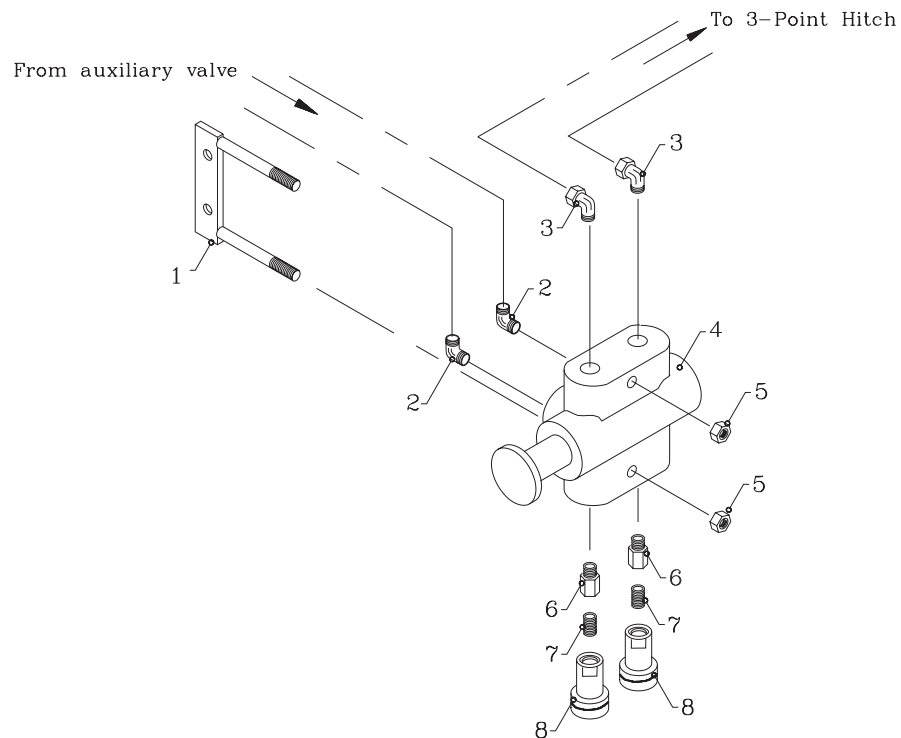


Parts List for Figure 21

Ref	Part no.	Description	Quantity
1	64-581	Bracket, Selector Valve Mount	1
2	25-2503-6-6	Fitting, 90 Degree, O-Ring	2
3	25-3507-6-4	Fitting, 45 Degree, Swivel	2
4	23-057	Valve, Manual Selector	1
5	99-A06	Locknut, 3/8	2
6	25-0502-6-4	Adapter Fitting	2
7	29-026	Close Nipple, 1/4 Pipe	2
8	23-003	Coupler, Female	2
*	70-053	Kit, Selector Valve (includes Ref. 1 - 7)	1

*Not Illustrated

**12 Volt Electrical
Outlet Parts
Figure 27**

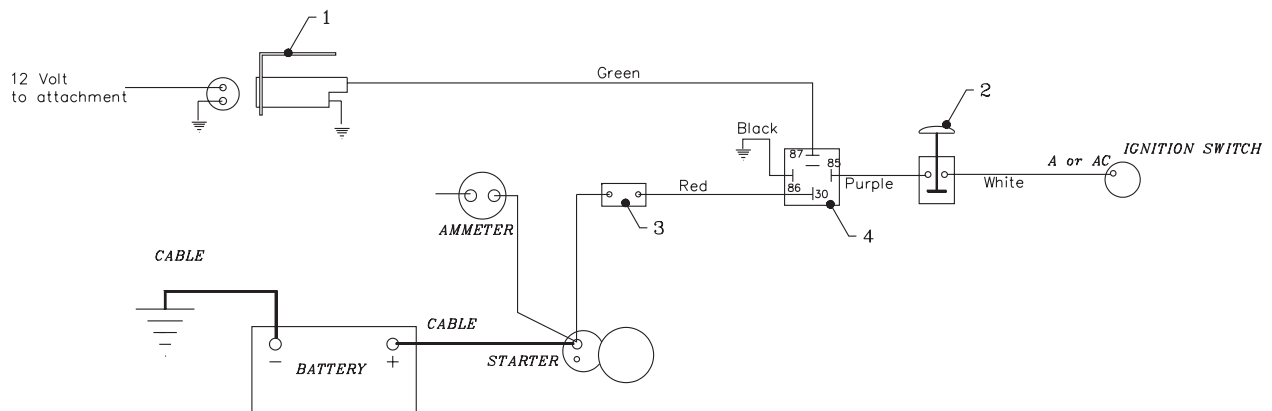

Parts List for Figure 27

Ref	Part no.	Description	Quantity
-----	----------	-------------	----------

12 Volt Electrical Outlet Kit

**This is Part No. 70--057 universal kit
for all 425 power units.
It consists of the following:**

1	30--111	Plug and Outlet Assembly	1
	30--116	Female Outlet Only	1
	30--117	Male Plug Only	1
2	31--003	Push--Pull Switch	1
3	30--114	Breaker, 20 Amp	1
4	35--067	Relay	1
*	01--027	Screw, #10 x 5/8	5
*	01--018	Lock Washer, #10	5
*	01--013	Nut, #10	5
*	95--06	Flat Washer, 3/8 SAE	2
*		Relay connector, Wiring, Wire Ends, Protective Mesh, etc.	

* Not Illustrated

